

SIEMENS

MICROMASTER 410

Parameter List

Issue A1



Documentation to MICROMASTER 410

Getting Started Guide

Is for quick commissioning.



Operating Instructions

Gives information about features of the MICROMASTER 410, Installation, Commissioning, Control modes, System Parameter structure, Troubleshooting, Specifications and available options of the MICROMASTER 410.




Parameter List

The Parameterlist contains the description of all Parameters structured in functional order and a detailed description.



Catalogues

In the catalogue you will find all necessary information to select a certain inverter, as well as filters, chokes, operator panels or communications options.

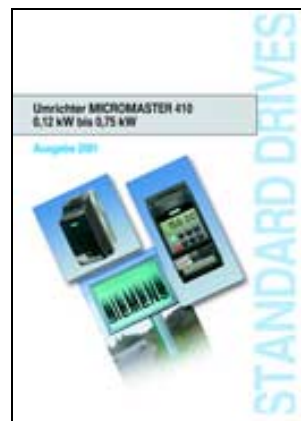

SIEMENS

MICROMASTER 410

Parameter List
User Documentation

Valid for

Issue A1

Converter Type
MICROMASTER 410

| |
|-------------------|
| Parameter List |
| Faults and Alarms |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |



Warning

Please refer to all Definitions and Warnings contained in the Operating Instructions. The operating instructions can be ordered via your local Siemens sales office under the Order No. 6SE6400-5EA00-0BP0.

Further information can be obtained from Internet website:
<http://www.siemens.de/micromaster>

Approved Siemens Quality for Software and Training
is to DIN ISO 9001, Reg. No. 2160-01

The reproduction, transmission or use of this document, or its contents is not permitted unless authorized in writing. Offenders will be liable for damages. All rights including rights created by patent grant or registration of a utility model or design are reserved.

© Siemens AG 2001. All Rights Reserved.

MICROMASTER® is a registered trademark of Siemens

Other functions not described in this document may be available. However, this fact shall not constitute an obligation to supply such functions with a new control, or when servicing.

We have checked that the contents of this document correspond to the hardware and software described. There may be discrepancies nevertheless, and no guarantee can be given that they are completely identical. The information contained in this document is reviewed regularly and any necessary changes will be included in the next edition. We welcome suggestions for improvement.

Siemens handbooks are printed on chlorine-free paper that has been produced from managed sustainable forests. No solvents have been used in the printing or binding process.

Document subject to change without prior notice.

Order number: 6SE6400-5EB00-0BP0
Printed in the Federal of Germany

Siemens-Aktiengesellschaft.

Parameters MICROMASTER 410

This Parameter List must only be used together with the Operating Instructions of the MICROMASTER 410. Please pay special attention to the Warnings, Cautions, Notices and Notes contained in these manuals.

Table of Contents

| | | |
|-----|--|----|
| 1 | Parameters..... | 6 |
| 1.1 | Introduction to MICROMASTER 410 System Parameters..... | 6 |
| 1.2 | Quick commissioning (P0010=1) | 8 |
| 1.3 | Parameter Description | 10 |
| 2 | Faults and Alarms | 52 |
| 2.1 | Fault Messages | 52 |
| 2.2 | Alarms | 53 |

1 Parameters

1.1 Introduction to MICROMASTER 410 System Parameters

The layout of the parameter description is as follows.

| | | | | | |
|-------------------------|--|-------------------------|--------------------------|------------------------------|-----------------------|
| 1 Par number [index] | 2 Parameter name 3 CStat: 4 P-Group: | 5 Datatype 6 active: | 7 Unit: 8 Quick Comm: | 9 Min: 10 Def: 11 Max: | 12 Level: 2 |
| 13 Description: | | | | | |

1. Parameter number

Indicates the relevant parameter number. The numbers used are 4-digit numbers in the range 0000 to 9999. Numbers prefixed with an "r" indicate that the parameter is a "read-only" parameter, which displays a particular value but cannot be changed directly by specifying a different value via this parameter number (in such cases, dashes "-" are entered at the points "Unit", "Min", "Def" and "Max" in the header of the parameter description.

All other parameters are prefixed with a "P". The values of these parameters can be changed directly in the range indicated by the "Min" and "Max" settings in the header.

[index] indicates that the parameter is an indexed parameter and specifies the number of indices available.

2. Parameter name

Indicates the name of the relevant parameter. Certain parameter names include the following abbreviated prefixes: BI, BO, CI, and CO followed by a colon.

These abbreviations have the following meanings:

| | | |
|-------|---|--|
| BI | = | Binector input, i.e. parameter selects the source of a binary signal |
| BO | = | Binector output, i.e. parameter connects as a binary signal |
| CI | = | Connector input, i.e. parameter selects the source of an analog signal |
| CO | = | Connector output, i.e. parameter connects as an analog signal |
| CO/BO | = | Connector/Binector output, i.e. parameter connects as an analog signal and/or as a binary signal |

The BiCo system is not available with the MM410. To be unique with the names of the other inverter types the Parameter names did not change.

3. CStat

Commissioning status of the parameter. Three states are possible:

| | |
|---------------|---|
| Commissioning | C |
| Run | U |
| Ready to run | T |

This indicates when the parameter can be changed. One, two or all three states may be specified. If all three states are specified, this means that it is possible to change this parameter setting in all three inverter states

4. **P-Group**
Indicates the functional group of the particular.
-
- Note**
Parameter P0004 (parameter filter) acts as a filter and focuses access to parameters according to the functional group selected.
-
5. **Datatype**
The data types available are shown in the table below.
- | Notation | Meaning |
|----------|-----------------|
| U16 | 16-bit unsigned |
| U32 | 32-bit unsigned |
| I16 | 16-bit integer |
| I32 | 32-bit integer |
| Float | Floating point |
6. **Active**
Indicates whether
- ◆ Immediately changes to the parameter values take effective immediately after they have been entered, or
 - ◆ First confirm the "P" button on the operator panel (OP) must be pressed before the changes take effect.
7. **Unit**
Indicates the unit of measure applicable to the parameter values
8. **QuickComm**
Indicates whether or not (Yes or No) a parameter can only be changed during quick commissioning, i.e. when P0010 (parameter groups for commissioning) is set to 1 (quick commissioning).
9. **Min**
Indicates the minimum value to which the parameter can be set.
10. **Def**
Indicates the default value, i.e. the value which applies if the user does not specify a particular value for the parameter.
11. **Max**
Indicates the maximum value to which the parameter can be set.
12. **Level**
Indicates the level of user access. There are three access levels: Standard, Extended and Expert. The number of parameters that appear in each functional group depends on the access level set in P0003 (user access level).
13. **Description**
The parameter description consists of the sections and contents listed below. Some of these sections and contents are optional and will be omitted on a case-to-case basis if not applicable.
- Description:** Brief explanation of the parameter function.
- Diagram:** Where applicable, diagram to illustrate the effects of parameters on a characteristic curve, for example
- Settings:** List of applicable settings. These include
Possible settings, Most common settings, Index and Bitfields
- Example:** Optional example of the effects of a particular parameter setting.
- Dependency:** Any conditions that must be satisfied in connection with this parameter. Also any particular effects, which this parameter has on other parameter(s) or which other parameters have on this one.
- Warning / Caution / Notice / Note:**
Important information which must be observed to prevent personal injury or damage to equipment / specific information which should be heeded in order to avoid problems / information which may be helpful to the user
- More details:** Any sources of more detailed information concerning the particular parameter.

1.2 Quick commissioning (P0010=1)

The following parameters are necessary for quick commissioning (P0010=1).

| No | Name | Access level | Cstat |
|-------|---------------------------------|--------------|-------|
| P0100 | Europe / North America | 1 | C |
| P0300 | Select motor type | 3 | C |
| P0304 | Rated motor voltage | 1 | C |
| P0305 | Rated motor current | 1 | C |
| P0307 | Rated motor power | 1 | C |
| P0308 | Rated motor cosPhi | 3 | C |
| P0309 | Rated motor efficiency | 3 | C |
| P0310 | Rated motor frequency | 1 | C |
| P0311 | Rated motor speed | 1 | C |
| P0335 | Motor cooling | 3 | CT |
| P0640 | Motor overload factor [%] | 3 | CUT |
| P0700 | Selection of command source | 1 | CT |
| P1000 | Selection of frequency setpoint | 1 | CT |
| P1080 | Min. Frequency | 1 | CUT |
| P1082 | Max. Frequency | 1 | CT |
| P1120 | Ramp-up time | 1 | CUT |
| P1121 | Ramp-down time | 1 | CUT |
| P1135 | OFF3 ramp-down time | 3 | CUT |
| P1300 | Control mode | 2 | CT |
| P3900 | End of quick commissioning | 1 | C |

When P0010=1 is chosen, P0003 (user access level) can be used to select the parameters to be accessed. This parameter also allows selection of a user-defined parameter list for quick commissioning.

At the end of the quick commissioning sequence, set P3900 = 1 to carry out the necessary motor calculations and clear all other parameters (not included in P0010=1) to their default settings.

Note

This applies only in Quick Commissioning mode.

Reset to Factory default

To reset all parameters to the factory default settings; the following parameters should be set as follows:

Set P0010=30.


Set P0970=1.

Note

The reset process takes approximately 10 seconds to complete. Reset to Factory default

Seven-segment display

The seven-segment display is structured as follows:

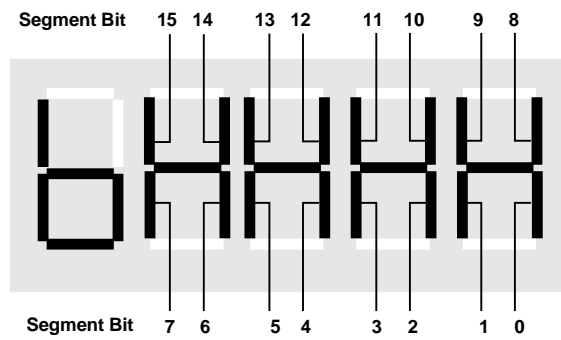

The significance of the relevant bits in the display is described in the status and control word parameters.

1.3 Parameter Description

| | | | | | |
|--------------------|---|------------------------------|----------------------|---|---------------------------|
| r0000 | Drive display | Datatype: U16 | Unit: - | Min: - Def: - Max: - | Level: 1 |
| | P-Group: ALWAYS | | | | |
| | Displays the user selected output as defined in P0005. | | | | |
| Note: | Pressing the "Fn" button for 2 seconds allows the user to view the values of DC link voltage, output frequency, output voltage, and chosen r0000 setting (defined in P0005). | | | | |
| r0002 | Drive state | Datatype: U16 | Unit: - | Min: - Def: - Max: - | Level: 3 |
| | P-Group: COMMANDS | | | | |
| | Displays actual drive state. | | | | |
| Enum: | <ul style="list-style-type: none"> 0 Commissioning mode (P0010 != 0) 1 Drive ready 2 Drive fault active 3 Drive starting (DC-link precharging) 4 Drive running 5 Stopping (ramping down) | | | | |
| Dependency: | State 3 visible only while precharging DC link. | | | | |
| P0003 | User access level | Datatype: U16 | Unit: - | Min: 1 Def: 1 Max: 4 | Level: 1 |
| | CStat: CUT P-Group: ALWAYS | Active: First confirm | QuickComm. No | | |
| | Defines user access level to parameter sets. The default setting (standard) is sufficient for most simple applications. | | | | |
| Enum: | <ul style="list-style-type: none"> 1 Standard: Allows access into most frequently used parameters. 2 Extended: Allows extended access e.g. to inverter I/O functions. 3 Expert: For expert use only. 4 Reserved | | | | |
| P0004 | Parameter filter | Datatype: U16 | Unit: - | Min: 0 Def: 0 Max: 21 | Level: 3 |
| | CStat: CUT P-Group: ALWAYS | Active: First confirm | QuickComm. No | | |
| | Filters available parameters according to functionality to enable a more focussed approach to commissioning. | | | | |
| Example: | P0004 = 8 specifies that only ADC parameters will be visible. | | | | |
| Enum: | <ul style="list-style-type: none"> 0 All parameters 2 Inverter 3 Motor 7 Commands, binary I/O 8 ADC 10 Setpoint channel / RFG 12 Drive features 13 Motor control 20 Communication 21 Alarms / warnings / monitoring | | | | |
| Dependency: | Parameters marked "Quick Comm: Yes" in the parameter header can only be set when P0010 = 1 (Quick Commissioning). | | | | |
| Note: | The inverter will start with any setting of P0004. | | | | |
| P0005 | Display selection | Datatype: U16 | Unit: - | Min: 2 Def: 21 Max: 2294 | Level: 2 |
| | CStat: CUT P-Group: FUNC | Active: First confirm | QuickComm. No | | |
| | Selects display for parameter r0000 (drive display). | | | | |
| Settings: | <ul style="list-style-type: none"> 21 Actual frequency 25 Output voltage 26 DC link voltage | | | | |
| Notice: | These settings refer to read only parameter numbers ("rxxxx"). | | | | |
| Details: | See relevant "rxxxx" parameter descriptions. | | | | |

| | | | | |
|--------------|---------------------------------------|------------------------------|---------------------------|-------------------------------------|
| P0010 | Commissioning parameter filter | Min: 0 | Level: 1 | |
| | CStat: CT | Datatype: U16 | | Def: 0 |
| | P-Group: ALWAYS | Active: First confirm | | QuickComm. No Max: 30 |

Filters parameters so that only those related to a particular functional group are selected.

Enum:

| | |
|----|---------------------|
| 0 | Ready |
| 1 | Quick commissioning |
| 2 | Inverter |
| 29 | Download |
| 30 | Factory setting |

Dependency:

Reset to 0 for inverter to run.

P0003 (user access level) also determines access to parameters.

Note:

If P3900 is not 0 (0 is the default value), this parameter is automatically reset to 0.

| | | | | |
|--------------|--------------------------|----------------|---------------------------|---------------|
| r0018 | Firmware version | Min: - | Level: 3 | |
| | Datatype: Float | Unit: - | | Def: - |
| | P-Group: INVERTER | | | Max: - |

Displays version number of installed firmware.

| | | | | |
|--------------|--------------------------------|----------------|---------------------------|---------------|
| r0019 | CO/BO: BOP control word | Min: - | Level: 3 | |
| | Datatype: U16 | Unit: - | | Def: - |
| | P-Group: COMMANDS | | | Max: - |

Displays status of operator panel commands.

The settings below are used as the "source" codes for keypad control when connecting to BICO input parameters.

Bitfields:

| | | | |
|-------|------------------------------|---|-----|
| Bit00 | ON/OFF1 | 0 | NO |
| | | 1 | YES |
| Bit01 | OFF2: Electrical stop | 0 | YES |
| | | 1 | NO |
| Bit08 | JOG right | 0 | NO |
| | | 1 | YES |
| Bit11 | Reverse (setpoint inversion) | 0 | NO |
| | | 1 | YES |
| Bit13 | Motor potentiometer MOP up | 0 | NO |
| | | 1 | YES |
| Bit14 | Motor potentiometer MOP down | 0 | NO |
| | | 1 | YES |

Note:

When BICO technology is used to allocate functions to panel buttons, this parameter displays the actual status of the relevant command.

The following functions can be "connected" to individual buttons:

- ON/OFF1,
- OFF2,
- JOG,
- REVERSE,
- INCREASE,
- DECREASE

| | | | | |
|--------------|------------------------------------|-----------------|---------------------------|---------------|
| r0020 | CO: Act. frequency setpoint | Min: - | Level: 2 | |
| | Datatype: Float | Unit: Hz | | Def: - |
| | P-Group: CONTROL | | | Max: - |

Displays actual frequency setpoint (output from ramp function generator).

| | | | | |
|--------------|---------------------------|-----------------|---------------------------|---------------|
| r0021 | CO: Act. frequency | Min: - | Level: 2 | |
| | Datatype: Float | Unit: Hz | | Def: - |
| | P-Group: CONTROL | | | Max: - |

Displays actual inverter output frequency (r0024) excluding slip compensation, resonance damping and frequency limitation.

| | | | | |
|--------------|-------------------------|--------------------|---------------------------|---------------|
| r0022 | Act. rotor speed | Min: - | Level: 3 | |
| | Datatype: Float | Unit: 1/min | | Def: - |
| | P-Group: CONTROL | | | Max: - |

Displays calculated rotor speed based on inverter output frequency [Hz] x 120 / number of poles.

Note:

This calculation makes no allowance for load-dependent slip.

| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|--|--|----------------------------|--------------------|-------|-------------|---|----|--|--|---|-----|-------|--------------------|---|----|--|--|---|-----|-------|---------------|---|----|--|--|---|-----|-------|--------------------|---|----|--|--|---|-----|-------|-------------|---|-----|--|--|---|----|-------|-------------|---|-----|--|--|---|----|-------|-------------------|---|----|--|--|---|-----|-------|----------------------|---|----|--|--|---|-----|-------|------------------------------|---|-----|--|--|---|----|-------|-------------|---|----|--|--|---|-----|-------|---------------------------|---|----|--|--|---|-----|-------|------------------------------|---|-----|--|--|---|----|-------|----------------------------|---|----|--|--|---|-----|-------|----------------|---|-----|--|--|---|----|-------|----------------------------|---|----|--|--|---|-----|-------|-------------------|---|-----|--|--|---|----|
| r0024 | CO: Act. output frequency Datatype: Float Unit: Hz P-Group: CONTROL | Min: - Def: - Max: - | Level: 3 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Displays actual output frequency (slip compensation, resonance damping and frequency limitation are included). | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| r0025 | CO: Act. output voltage Datatype: Float Unit: V P-Group: CONTROL | Min: - Def: - Max: - | Level: 3 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Displays [rms] voltage applied to motor. | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| r0026 | CO: Act. DC-link voltage Datatype: Float Unit: V P-Group: INVERTER | Min: - Def: - Max: - | Level: 2 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Displays DC-link voltage. | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| r0034 | CO: Motor temperature (i2t) Datatype: Float Unit: % P-Group: MOTOR | Min: - Def: - Max: - | Level: 3 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Displays calculated motor temperature (I2t model) as [%] of the maximum permissible value. | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Note: | A value of 100 % means that the motor has reached its maximum permissible operating temperature. In this case, the converter will attempt to reduce the motor loading as defined in P0610 (motor I2t temperature reaction). | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| r0052 | CO/BO: Act. status word 1 Datatype: U16 Unit: - P-Group: COMMANDS | Min: - Def: - Max: - | Level: 2 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Displays first active status word of inverter (bit format) and can be used to diagnose inverter status. The display segments for the status word are shown in the "Introduction to MICROMASTER 410 System Parameters". | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Bitfields: | <table> <tr><td>Bit00</td><td>Drive ready</td><td>0</td><td>NO</td></tr> <tr><td></td><td></td><td>1</td><td>YES</td></tr> <tr><td>Bit01</td><td>Drive ready to run</td><td>0</td><td>NO</td></tr> <tr><td></td><td></td><td>1</td><td>YES</td></tr> <tr><td>Bit02</td><td>Drive running</td><td>0</td><td>NO</td></tr> <tr><td></td><td></td><td>1</td><td>YES</td></tr> <tr><td>Bit03</td><td>Drive fault active</td><td>0</td><td>NO</td></tr> <tr><td></td><td></td><td>1</td><td>YES</td></tr> <tr><td>Bit04</td><td>OFF2 active</td><td>0</td><td>YES</td></tr> <tr><td></td><td></td><td>1</td><td>NO</td></tr> <tr><td>Bit05</td><td>OFF3 active</td><td>0</td><td>YES</td></tr> <tr><td></td><td></td><td>1</td><td>NO</td></tr> <tr><td>Bit06</td><td>ON inhibit active</td><td>0</td><td>NO</td></tr> <tr><td></td><td></td><td>1</td><td>YES</td></tr> <tr><td>Bit07</td><td>Drive warning active</td><td>0</td><td>NO</td></tr> <tr><td></td><td></td><td>1</td><td>YES</td></tr> <tr><td>Bit08</td><td>Deviation setp. / act. value</td><td>0</td><td>YES</td></tr> <tr><td></td><td></td><td>1</td><td>NO</td></tr> <tr><td>Bit09</td><td>PZD control</td><td>0</td><td>NO</td></tr> <tr><td></td><td></td><td>1</td><td>YES</td></tr> <tr><td>Bit10</td><td>Maximum frequency reached</td><td>0</td><td>NO</td></tr> <tr><td></td><td></td><td>1</td><td>YES</td></tr> <tr><td>Bit11</td><td>Warning: Motor current limit</td><td>0</td><td>YES</td></tr> <tr><td></td><td></td><td>1</td><td>NO</td></tr> <tr><td>Bit12</td><td>Motor holding brake active</td><td>0</td><td>NO</td></tr> <tr><td></td><td></td><td>1</td><td>YES</td></tr> <tr><td>Bit13</td><td>Motor overload</td><td>0</td><td>YES</td></tr> <tr><td></td><td></td><td>1</td><td>NO</td></tr> <tr><td>Bit14</td><td>Motor runs direction right</td><td>0</td><td>NO</td></tr> <tr><td></td><td></td><td>1</td><td>YES</td></tr> <tr><td>Bit15</td><td>Inverter overload</td><td>0</td><td>YES</td></tr> <tr><td></td><td></td><td>1</td><td>NO</td></tr> </table> | | | Bit00 | Drive ready | 0 | NO | | | 1 | YES | Bit01 | Drive ready to run | 0 | NO | | | 1 | YES | Bit02 | Drive running | 0 | NO | | | 1 | YES | Bit03 | Drive fault active | 0 | NO | | | 1 | YES | Bit04 | OFF2 active | 0 | YES | | | 1 | NO | Bit05 | OFF3 active | 0 | YES | | | 1 | NO | Bit06 | ON inhibit active | 0 | NO | | | 1 | YES | Bit07 | Drive warning active | 0 | NO | | | 1 | YES | Bit08 | Deviation setp. / act. value | 0 | YES | | | 1 | NO | Bit09 | PZD control | 0 | NO | | | 1 | YES | Bit10 | Maximum frequency reached | 0 | NO | | | 1 | YES | Bit11 | Warning: Motor current limit | 0 | YES | | | 1 | NO | Bit12 | Motor holding brake active | 0 | NO | | | 1 | YES | Bit13 | Motor overload | 0 | YES | | | 1 | NO | Bit14 | Motor runs direction right | 0 | NO | | | 1 | YES | Bit15 | Inverter overload | 0 | YES | | | 1 | NO |
| Bit00 | Drive ready | 0 | NO | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | 1 | YES | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Bit01 | Drive ready to run | 0 | NO | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | 1 | YES | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Bit02 | Drive running | 0 | NO | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | 1 | YES | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Bit03 | Drive fault active | 0 | NO | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | 1 | YES | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Bit04 | OFF2 active | 0 | YES | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | 1 | NO | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Bit05 | OFF3 active | 0 | YES | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | 1 | NO | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Bit06 | ON inhibit active | 0 | NO | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | 1 | YES | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Bit07 | Drive warning active | 0 | NO | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | 1 | YES | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Bit08 | Deviation setp. / act. value | 0 | YES | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | 1 | NO | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Bit09 | PZD control | 0 | NO | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | 1 | YES | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Bit10 | Maximum frequency reached | 0 | NO | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | 1 | YES | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Bit11 | Warning: Motor current limit | 0 | YES | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | 1 | NO | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Bit12 | Motor holding brake active | 0 | NO | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | 1 | YES | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Bit13 | Motor overload | 0 | YES | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | 1 | NO | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Bit14 | Motor runs direction right | 0 | NO | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | 1 | YES | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Bit15 | Inverter overload | 0 | YES | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | 1 | NO | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Note: | Output of Bit3 (Fault) will be inverted on digital output (Low = Fault, High = No Fault). | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |

| | | | | | |
|--------------|----------------------------------|----------------------|----------------|--------------------------------|---------------------------|
| r0053 | CO/BO: Act. status word 2 | Datatype: U16 | Unit: - | Min: - | Level: 2 |
| | P-Group: COMMANDS | | | Def: - Max: - | |

Displays second status word of inverter (in bit format).

Bitfields:

| | | | |
|--------|------------------------------|---|-----|
| Bit00 | DC brake active | 0 | NO |
| | | 1 | YES |
| Bit01 | Act. freq. r0024 > P2167 | 0 | NO |
| | | 1 | YES |
| Bit02 | Act. freq. r0024 > P1080 | 0 | NO |
| | | 1 | YES |
| Bit 05 | Reserved | | |
| Bit06 | Act. freq. r0024 >= setpoint | 0 | NO |
| | | 1 | YES |
| Bit 07 | Reserved | | |

Details:

See description of seven-segment display given in the "Introduction to MICROMASTER 410 System Parameters" in this manual.

| | | | | | |
|--------------|-----------------------------------|----------------------|----------------|--------------------------------|---------------------------|
| r0054 | CO/BO: Act. control word 1 | Datatype: U16 | Unit: - | Min: - | Level: 3 |
| | P-Group: COMMANDS | | | Def: - Max: - | |

Displays first control word of inverter and can be used to diagnose which commands are active.

Bitfields:

| | | | |
|-------|------------------------------|---|-----|
| Bit00 | ON/OFF1 | 0 | NO |
| | | 1 | YES |
| Bit01 | OFF2: Electrical stop | 0 | YES |
| | | 1 | NO |
| Bit02 | OFF3: Fast stop | 0 | YES |
| | | 1 | NO |
| Bit03 | Pulse enable | 0 | NO |
| | | 1 | YES |
| Bit04 | RFG enable | 0 | NO |
| | | 1 | YES |
| Bit05 | RFG start | 0 | NO |
| | | 1 | YES |
| Bit06 | Setpoint enable | 0 | NO |
| | | 1 | YES |
| Bit07 | Fault acknowledge | 0 | NO |
| | | 1 | YES |
| Bit08 | JOG right | 0 | NO |
| | | 1 | YES |
| Bit09 | JOG left | 0 | NO |
| | | 1 | YES |
| Bit10 | Control from PLC | 0 | NO |
| | | 1 | YES |
| Bit11 | Reverse (setpoint inversion) | 0 | NO |
| | | 1 | YES |
| Bit13 | Motor potentiometer MOP up | 0 | NO |
| | | 1 | YES |
| Bit14 | Motor potentiometer MOP down | 0 | NO |
| | | 1 | YES |
| Bit15 | Local / Remote | 0 | NO |
| | | 1 | YES |

Details:

See description of seven-segment display given in the "Introduction to MICROMASTER System Parameters" in this manual.

| | | | | | |
|--------------|--------------------------------------|----------------------|----------------|---|---------------------------|
| r0055 | CO/BO: Add. act. control word | Datatype: U16 | Unit: - | Min: - Def: - Max: - | Level: 3 |
| | P-Group: COMMANDS | | | | |

Displays additional control word of inverter and can be used to diagnose which commands are active.

Bitfields:

| | | | |
|-------|-----------------------|---|-----|
| Bit00 | Fixed frequency Bit 0 | 0 | NO |
| | | 1 | YES |
| Bit01 | Fixed frequency Bit 1 | 0 | NO |
| | | 1 | YES |
| Bit02 | Fixed frequency Bit 2 | 0 | NO |
| | | 1 | YES |
| Bit09 | DC brake enabled | 0 | NO |
| | | 1 | YES |
| Bit13 | External fault 1 | 0 | YES |
| | | 1 | NO |

Details:

See description of seven-segment display given in the "Introduction to MICROMASTER System Parameters" in this handbook.

| | | | | | |
|--------------|---------------------------------------|----------------------|----------------|---|---------------------------|
| r0056 | CO/BO: Status of motor control | Datatype: U16 | Unit: - | Min: - Def: - Max: - | Level: 2 |
| | P-Group: CONTROL | | | | |

Displays status of motor control (MM410: V/f status), which can be used to diagnose inverter status.

Bitfields:

| | | | |
|-------|------------------------------|---|-----|
| Bit00 | Init. control finished | 0 | NO |
| | | 1 | YES |
| Bit01 | Motor demagnetizing finished | 0 | NO |
| | | 1 | YES |
| Bit02 | Pulses enabled | 0 | NO |
| | | 1 | YES |
| Bit04 | Motor excitation finished | 0 | NO |
| | | 1 | YES |
| Bit05 | Starting boost active | 0 | NO |
| | | 1 | YES |
| Bit06 | Acceleration boost active | 0 | NO |
| | | 1 | YES |
| Bit07 | Frequency is negative | 0 | NO |
| | | 1 | YES |
| Bit08 | Field weakening active | 0 | NO |
| | | 1 | YES |
| Bit09 | Volts setpoint limited | 0 | NO |
| | | 1 | YES |
| Bit10 | Slip frequency limited | 0 | NO |
| | | 1 | YES |
| Bit11 | F_out > F_max Freq. limited | 0 | NO |
| | | 1 | YES |
| Bit13 | I-max controller active | 0 | NO |
| | | 1 | YES |
| Bit14 | Vdc-max controller active | 0 | NO |
| | | 1 | YES |

Details:

See description of seven-segment display given in the introduction

| | | | | | |
|--------------|--------------------------------------|------------------------|----------------|---|---------------------------|
| r0067 | CO: Act. output current limit | Datatype: Float | Unit: A | Min: - Def: - Max: - | Level: 3 |
| | P-Group: CONTROL | | | | |

Displays valid maximum output current of drive.

This value is influenced by the derating characteristics and the thermal motor and inverter protection.

Dependency:

P0610 (motor I2t temperature reaction) defines reaction when limit is reached.

Note:

Normally, current limit = rated motor current (P0305) x motor current limit (P0640). It is less than or equal to maximum inverter current r0209.

The current limit may be reduced if the motor thermal model calculation indicates that overheating will occur.

| | | | | |
|--------------|-------------------------------|------------------------------|---------------------------|-----------------------|
| P0100 | Europe / North America | Min: 0 | Level: 1 | |
| | CStat: C | Datatype: U16 | | Unit: - |
| | P-Group: QUICK | Active: First confirm | | QuickComm. Yes |

Determines whether power settings (e.g. nominal rating plate power - P0307) are expressed in [kW] or [hp].

The default settings for the nominal rating plate frequency (P0310) and maximum motor frequency (P1082) are also set automatically here, in addition to reference frequency (P2000).

Enum:

| | | |
|---|---------------------|-------------------------|
| 0 | Europe [kW], | frequency default 50 Hz |
| 1 | North America [hp], | frequency default 60 Hz |
| 2 | North America [kW], | frequency default 60 Hz |

Dependency:

The wire link for the frequency range can also be used to select the default frequency:

| wire link | Meaning | | P0100 setting | Meaning |
|-----------|---------------------------------|--------------------------|---------------|---------------------------------|
| Uncut | [kW], frequency default 50 [Hz] | Can be overridden | 1 | [hp], frequency default 60 [Hz] |
| Cut | [hp], frequency default 60 [Hz] | Can be overridden | 0 | [kW], frequency default 50 [Hz] |

Stop drive first (i.e. disable all pulses) before you change this parameter.

P0010 = 1 (commissioning mode) enables changes to be made.

Changing P0100 resets all rated motor parameters as well as other parameters that depend on the rated motor parameters (see P0340 - calculation of motor parameters).

| | | | |
|--------------|-------------------------------------|---------------|---------------------------|
| r0200 | Act. power stack code number | Min: - | Level: 3 |
| | | Def: - | |
| | P-Group: INVERTER | Max: - | |

Identifies hardware variant as shown in table below.

| Code | Order number | Code | Order number |
|------|--------------------|------|--------------------|
| 2001 | 6SE6410-2UB11-2AA0 | 2011 | 6SE6410-2UA11-2AA0 |
| 2002 | 6SE6410-2UB12-5AA0 | 2012 | 6SE6410-2UA12-5AA0 |
| 2003 | 6SE6410-2UB13-7AA0 | 2013 | 6SE6410-2UA13-7AA0 |
| 2004 | 6SE6410-2UB15-5BA0 | 2014 | 6SE6410-2UA15-5BA0 |
| 2005 | 6SE6410-2UB17-5BA0 | | |
| 2006 | 6SE6410-2BB11-2AA0 | | |
| 2007 | 6SE6410-2BB12-5AA0 | | |
| 2008 | 6SE6410-2BB13-7AA0 | | |
| 2009 | 6SE6410-2BB15-5BA0 | | |
| 2010 | 6SE6410-2BB17-5BA0 | | |

Notice:

Parameter r0200 = 0 indicates that no power stack has been identified.

| | | | |
|--------------|--------------------------------|-------------------|---------------------------|
| P0201 | Power stack code number | Min: 0 | Level: 3 |
| | | Def: 0 | |
| | P-Group: INVERTER | Max: 65535 | |

Confirms actual power stack identified.

| | | | |
|--------------|---|---------------|---------------------------|
| r0206 | Rated inverter power [kW] / [hp] | Min: - | Level: 3 |
| | | Def: - | |
| | P-Group: INVERTER | Max: - | |

Displays nominal rated motor power from inverter.

Dependency:

Value is displayed in [kW] or [hp] depending on setting for P0100 (operation for Europe / North America).

| | | | |
|--------------|-------------------------------|---------------|---------------------------|
| r0207 | Rated inverter current | Min: - | Level: 3 |
| | | Def: - | |
| | P-Group: INVERTER | Max: - | |

Displays maximum continuous output current of inverter.

| | | | |
|--------------|---------------------------------|---------------|---------------------------|
| r0209 | Maximum inverter current | Min: - | Level: 3 |
| | | Def: - | |
| | P-Group: INVERTER | Max: - | |

Displays maximum output current of inverter.

| | | | | | |
|--------------|--------------------------|----------------------------|----------------------|------------------|---------------------------|
| P0210 | Supply voltage | | | Min: 0 | Level: 3 |
| | CStat: CT | Datatype: U16 | Unit: V | Def: 230 | |
| | P-Group: INVERTER | Active: Immediately | QuickComm. No | Max: 1000 | |

Optimizes Vdc controller, which extends the ramp-down time if regenerative energy from motor would otherwise cause DC link overvoltage trips.

Reducing the value enables controller to cut in earlier and reduce the risk of overvoltage.

Dependency:

Cut-in levels for Vdc-controller and compound braking are derived directly from P0210 (supply voltage).

230 V version

$$\text{Vdc_max switch-on level} = 1.15 * \sqrt{2} * V_{\text{mains}}$$

$$\text{Compound braking switch-on level} = 1.13 * \sqrt{2} * V_{\text{mains}}$$

115 V version

$$\text{Vdc_max_on} = 1.15 * \sqrt{2} * V_{\text{mains}} * 2$$

$$\text{Compound braking switch-on level} = 1.13 * \sqrt{2} * V_{\text{mains}} * 2$$

Note:

If mains voltage is higher than value entered, automatic deactivation of the Vdc controller may occur to avoid acceleration of the motor. An alarm will be issued in this case (A0910).

| | | | | | |
|--------------|-----------------------------------|------------------------------|----------------------|---------------|---------------------------|
| P0290 | Inverter overload reaction | | | Min: 0 | Level: 3 |
| | CStat: CT | Datatype: U16 | Unit: - | Def: 2 | |
| | P-Group: INVERTER | Active: First confirm | QuickComm. No | Max: 3 | |

Selects reaction of inverter to an internal over-temperature.

Enum:

- 0 Reduce output frequency (usually only effective on variable torque appl.)
- 1 Trip (F0004)
- 2 Reduce pulse frequency and output frequency
- 3 Reduce pulse frequency then trip (F0004)

Notice:

A trip will always result eventually, if the action taken does not sufficiently reduce internal temperature.

The pulse frequency is normally reduced only if higher than 2 kHz.

| | | | | | |
|--------------|--------------------------|------------------------------|-----------------------|---------------|---------------------------|
| P0300 | Select motor type | | | Min: 1 | Level: 3 |
| | CStat: C | Datatype: U16 | Unit: - | Def: 1 | |
| | P-Group: MOTOR | Active: First confirm | QuickComm. Yes | Max: 2 | |

Selects motor type.

This parameter is required during commissioning to select motor type and optimize inverter performance. Most motors are asynchronous; if in doubt, use the formula below.
(rated motor frequency (P0310) * 60) / rated motor speed (P0311)

If the result is a whole number, the motor is synchronous.

Enum:

- 1 Asynchronous motor
- 2 Synchronous motor

Dependency:


Changeable only when P0010 = 1 (quick commissioning).

If synchronous motor is selected, the following functions are not available:

- Power factor (P0308)
- Motor efficiency (P0309)
- Flying start (P1200, P1202, P1203)
- DC braking, P1232, P1233)
- Slip compensation (P1335)

| | | | | |
|--------------|----------------------------|------------------------------|---------------------------|-----------------------|
| P0304 | Rated motor voltage | Min: 10 | Level: 1 | |
| | CStat: C | Datatype: U16 | | Unit: V |
| | P-Group: MOTOR | Active: First confirm | | QuickComm. Yes |
| | | Def: 230 | | |
| | | Max: 2000 | | |

Nominal motor voltage [V] from rating plate. Following diagram shows a typical rating plate with the locations of the relevant motor data.

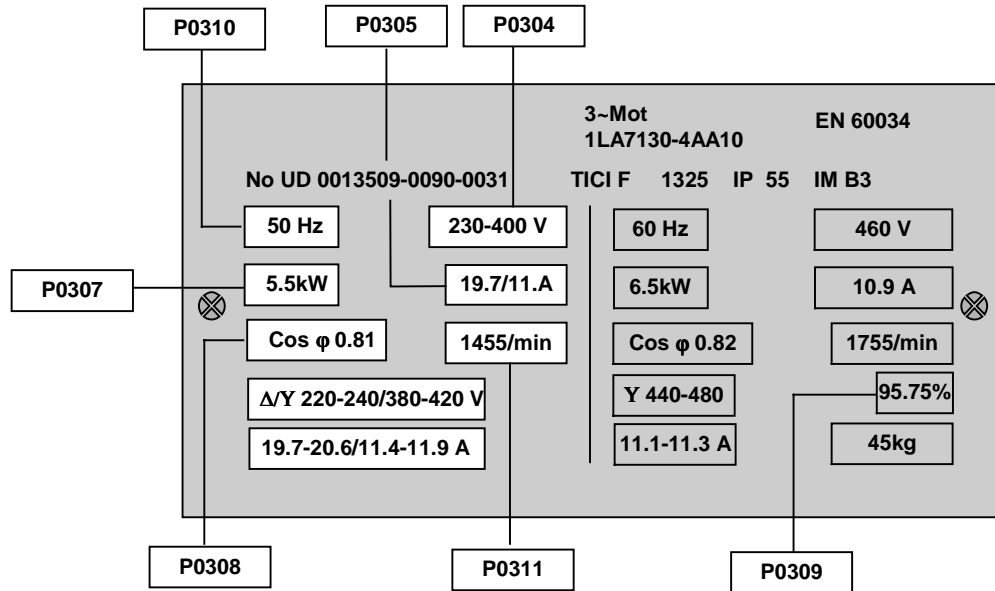

Dependency:

Changeable only when P0010 = 1 (quick commissioning).

| | | | | |
|--------------|----------------------------|------------------------------|---------------------------|-----------------------|
| P0305 | Rated motor current | Min: 0.01 | Level: 1 | |
| | CStat: C | Datatype: Float | | Unit: A |
| | P-Group: MOTOR | Active: First confirm | | QuickComm. Yes |
| | | Def: 3.25 | | |
| | | Max: 10000.00 | | |

Nominal motor current [A] from rating plate - see diagram in P0304.

Dependency:

Changeable only when P0010 = 1 (quick commissioning).

Note:

For asynchronous motors, the maximum value is defined as the maximum inverter current (r0209).

For synchronous motors, the maximum value is defined as twice the maximum inverter current (r0209)

The minimum value is defined as 1/32 times inverter rated current (r0207).

| | | | | |
|--------------|--------------------------|------------------------------|---------------------------|-----------------------|
| P0307 | Rated motor power | Min: 0.01 | Level: 1 | |
| | CStat: C | Datatype: Float | | Unit: - |
| | P-Group: MOTOR | Active: First confirm | | QuickComm. Yes |
| | | Def: 0.75 | | |
| | | Max: 2000.00 | | |

Nominal motor power [kW/hp] from rating plate.

Dependency:

If P0100 = 1, values will be in [hp] - see diagram P0304 (rating plate).

Changeable only when P0010 = 1 (quick commissioning).

| | | | | |
|--------------|---------------------------|------------------------------|---------------------------|-----------------------|
| P0308 | Rated motor cosPhi | Min: 0.000 | Level: 3 | |
| | CStat: C | Datatype: Float | | Unit: - |
| | P-Group: MOTOR | Active: First confirm | | QuickComm. Yes |
| | | Def: 0.000 | | |
| | | Max: 1.000 | | |

Nominal motor power factor (cosPhi) from rating plate - see diagram P0304.

Dependency:

Changeable only when P0010 = 1 (quick commissioning).

Visible only when P0100 = 0 or 2, (motor power entered in [kW]).

Setting 0 causes internal calculation of value.

| | | | |
|---|---|---------------------|---------------|
| P0309 | Rated motor efficiency | Min: 0.0 | Level: |
| | CStat: C Datatype: Float Unit: % Def: 0.0 | | 3 |
| | P-Group: MOTOR Active: First confirm QuickComm. Yes Max: 99.9 | | |
| Nominal motor efficiency in [%] from rating plate. | | | |
| Dependency: | | | |
| Changeable only when P0010 = 1 (quick commissioning). | | | |
| Visible only when P0100 = 1, (i.e. motor power entered in [hp]). | | | |
| Setting 0 causes internal calculation of value. | | | |
| Details: | | | |
| See diagram in P0304 (rating plate) | | | |
| P0310 | Rated motor frequency | Min: 12.00 | Level: |
| | CStat: C Datatype: Float Unit: Hz Def: 50.00 | | 1 |
| | P-Group: MOTOR Active: First confirm QuickComm. Yes Max: 650.00 | | |
| Nominal motor frequency [Hz] from rating plate. | | | |
| Dependency: | | | |
| Changeable only when P0010 = 1 (quick commissioning). | | | |
| Pole pair number recalculated automatically if parameter is changed. | | | |
| Details: | | | |
| See diagram in P0304 (rating plate) | | | |
| P0311 | Rated motor speed | Min: 0 | Level: |
| | CStat: C Datatype: U16 Unit: 1/min Def: 0 | | 1 |
| | P-Group: MOTOR Active: First confirm QuickComm. Yes Max: 40000 | | |
| Nominal motor speed [rpm] from rating plate. | | | |
| Dependency: | | | |
| Changeable only when P0010 = 1 (quick commissioning). | | | |
| Setting 0 causes internal calculation of value. | | | |
| Slip compensation in V/f control requires rated motor speed for correct operation. | | | |
| Pole pair number recalculated automatically if parameter is changed. | | | |
| Details: | | | |
| See diagram in P0304 (rating plate) | | | |
| P0335 | Motor cooling | Min: 0 | Level: |
| | CStat: CT Datatype: U16 Unit: - Def: 0 | | 3 |
| | P-Group: MOTOR Active: First confirm QuickComm. Yes Max: 1 | | |
| Selects motor cooling system used. | | | |
| Enum: | | | |
| 0 Self-cooled: Using shaft mounted fan attached to motor | | | |
| 1 Force-cooled: Using separately powered cooling fan | | | |
| P0340 | Calculation of motor parameters | Min: 0 | Level: |
| | CStat: CT Datatype: U16 Unit: - Def: 0 | | 3 |
| | P-Group: MOTOR Active: First confirm QuickComm. No Max: 1 | | |
| Calculates various motor parameters, including: | | | |
| Reference frequency P2000 | | | |
| Enum: | | | |
| 0 No calculation | | | |
| 1 Complete parameterization | | | |
| Note: | | | |
| This parameter is required during commissioning to optimize inverter performance. | | | |
| P0350 | Stator resistance (line-to-line) | Min: 0.00001 | Level: |
| | CStat: CUT Datatype: Float Unit: Ohm Def: 4.0 | | 3 |
| | P-Group: MOTOR Active: Immediately QuickComm. No Max: 2000.0 | | |
| Stator resistance value in [Ohms] for connected motor (from line-to-line). The parameter value includes the cable resistance. | | | |
| There are three ways to determine the value for this parameter: | | | |
| 1. Calculate using P0340 = 1 (data entered from rating plate) or P3900 = 1,2 or 3 (end of quick commissioning) | | | |
| 2. Measure manually using an Ohmmeter. | | | |
| Note: | | | |
| Since measured line-to-line, this value may appear to be higher (up to 2 times higher) than expected. | | | |
| The value entered in P0350 (stator resistance) is the one obtained by the method last used. | | | |

| | | | |
|--------------|---|---------------|---------------------------|
| P0610 | Motor I2t temperature reaction | Min: 0 | Level: 3 |
| | CStat: CT Datatype: U16 Unit: - Def: 2 | | |
| | P-Group: MOTOR Active: First confirm QuickComm. No Max: 2 | | |

Defines reaction when motor I2t reaches warning threshold.

Enum:

- 0 No reaction, warning only
- 1 Warning and I_{max} reduction (results in reduced output freq.)
- 2 Warning and trip (F0011)

Dependency:

Trip level = P0614 (motor I2t overload warning level) * 110 %

| | | | |
|--------------|---|---------------|---------------------------|
| P0611 | Motor I2t time constant | Min: 0 | Level: 3 |
| | CStat: CT Datatype: U16 Unit: s Def: 100 | | |
| | P-Group: MOTOR Active: Immediately QuickComm. No Max: 16000 | | |

Defines motor thermal time constant and is calculated automatically from the motor data (see P0340). Calculation of r0034 is switched off, if P0611 is set lower than 100

Notice:

A larger number increases the time taken for the calculated motor temperature to change.

| | | | |
|--------------|---|-----------------|---------------------------|
| P0614 | Motor I2t overload warning level | Min: 0.0 | Level: 3 |
| | CStat: CUT Datatype: Float Unit: % Def: 100.0 | | |
| | P-Group: MOTOR Active: First confirm QuickComm. No Max: 400.0 | | |

Defines the [%] value at which alarm A0511 (motor overtemperature) is generated.

Motor I2t calculation is used to estimate a maximum tolerable period (i.e. without overheating) for motor overload. The I2t calculation value is deemed = 100 % when this maximum tolerable period is reached (see r0034).

Dependency:

A motor over-temperature trip (F0011) is produced at 110 % of this level.

| | | | |
|--------------|--|------------------|---------------------------|
| P0640 | Motor overload factor [%] | Min: 10.0 | Level: 3 |
| | CStat: CUT Datatype: Float Unit: % Def: 150.0 | | |
| | P-Group: MOTOR Active: Immediately QuickComm. Yes Max: 400.0 | | |

Defines motor overload current limit in [%] relative to P0305 (rated motor current).

Dependency:

Limited to maximum inverter current or to 400 % of rated motor current (P0305), whichever is the lower.

| | | | |
|--------------|---|---------------|---------------------------|
| P0700 | Selection of command source | Min: 0 | Level: 1 |
| | CStat: CT Datatype: U16 Unit: - Def: 2 | | |
| | P-Group: COMMANDS Active: First confirm QuickComm. Yes Max: 5 | | |

Selects digital command source.

Enum:

- 0 Factory default setting
- 1 BOP (keypad)
- 2 Terminal
- 4 USS on BOP link
- 5 USS on COM link

Note:

Changing this parameter resets (to default) all settings on item selected. For example: Changing from 1 to 2 resets all digital inputs to default settings.

| | | | | | | |
|--------------|------------------------------------|------------------------------|----------------------|----------------|---------------|---------------------------|
| P0701 | Function of digital input 1 | | | | Min: 0 | Level: 2 |
| | CStat: CT | Datatype: U16 | Unit: - | Def: 1 | | |
| | P-Group: COMMANDS | Active: First confirm | QuickComm. No | Max: 99 | | |

Selects function of digital input 1.

Enum:

| | |
|----|--|
| 0 | Digital input disabled |
| 1 | ON/OFF1 |
| 2 | ON reverse /OFF1 |
| 3 | OFF2 - coast to standstill |
| 4 | OFF3 - quick ramp-down |
| 9 | Fault acknowledge |
| 10 | JOG right |
| 11 | JOG left |
| 12 | Reverse |
| 13 | MOP up (increase freq.) |
| 14 | MOP down (decrease freq.) |
| 15 | Fixed setpoint (Direct selection) |
| 16 | Fixed setpoint (Direct selection + ON) |
| 21 | Local/remote |
| 25 | DC brake enable |
| 29 | External trip |
| 33 | Disable additional freq setpoint |
| 99 | Service |

Dependency:

Setting 99 service requires P0700 (command source) or P3900 (end of quick commissioning) = 1, 2 or P0970 (factory reset) = 1 in order to reset.

Notice:

Setting 99 for service use only.

| | | | | | | |
|--------------|------------------------------------|------------------------------|----------------------|----------------|---------------|---------------------------|
| P0702 | Function of digital input 2 | | | | Min: 0 | Level: 2 |
| | CStat: CT | Datatype: U16 | Unit: - | Def: 12 | | |
| | P-Group: COMMANDS | Active: First confirm | QuickComm. No | Max: 99 | | |

Selects function of digital input 2.

Enum:

| | |
|----|--|
| 0 | Digital input disabled |
| 1 | ON/OFF1 |
| 2 | ON reverse /OFF1 |
| 3 | OFF2 - coast to standstill |
| 4 | OFF3 - quick ramp-down |
| 9 | Fault acknowledge |
| 10 | JOG right |
| 11 | JOG left |
| 12 | Reverse |
| 13 | MOP up (increase freq.) |
| 14 | MOP down (decrease freq.) |
| 15 | Fixed setpoint (Direct selection) |
| 16 | Fixed setpoint (Direct selection + ON) |
| 21 | Local/remote |
| 25 | DC brake enable |
| 29 | External trip |
| 33 | Disable additional freq setpoint |
| 99 | Service |

Details:

See P0701 (function of digital input1).

| | | | | | | |
|--------------|------------------------------------|------------------------------|----------------------|----------------|---------------|---------------------------|
| P0703 | Function of digital input 3 | | | | Min: 0 | Level: 2 |
| | CStat: CT | Datatype: U16 | Unit: - | Def: 9 | | |
| | P-Group: COMMANDS | Active: First confirm | QuickComm. No | Max: 99 | | |

Selects function of digital input 3.

Enum:

| | |
|----|--|
| 0 | Digital input disabled |
| 1 | ON/OFF1 |
| 2 | ON reverse /OFF1 |
| 3 | OFF2 - coast to standstill |
| 4 | OFF3 - quick ramp-down |
| 9 | Fault acknowledge |
| 10 | JOG right |
| 11 | JOG left |
| 12 | Reverse |
| 13 | MOP up (increase freq.) |
| 14 | MOP down (decrease freq.) |
| 15 | Fixed setpoint (Direct selection) |
| 16 | Fixed setpoint (Direct selection + ON) |
| 21 | Local/remote |
| 25 | DC brake enable |
| 29 | External trip |
| 33 | Disable additional freq setpoint |
| 99 | Service |

Details:

See P0701 (function of digital input 1).

| | | | | | | |
|--------------|------------------------------------|------------------------------|----------------------|----------------|---------------|---------------------------|
| P0704 | Function of digital input 4 | | | | Min: 0 | Level: 2 |
| | CStat: CT | Datatype: U16 | Unit: - | Def: 0 | | |
| | P-Group: COMMANDS | Active: First confirm | QuickComm. No | Max: 99 | | |

Selects function of digital input 4 (via analog input).

Enum:

| | |
|----|----------------------------------|
| 0 | Digital input disabled |
| 1 | ON/OFF1 |
| 2 | ON reverse /OFF1 |
| 3 | OFF2 - coast to standstill |
| 4 | OFF3 - quick ramp-down |
| 9 | Fault acknowledge |
| 10 | JOG right |
| 11 | JOG left |
| 12 | Reverse |
| 13 | MOP up (increase freq.) |
| 14 | MOP down (decrease freq.) |
| 21 | Local/remote |
| 25 | DC brake enable |
| 29 | External trip |
| 33 | Disable additional freq setpoint |
| 99 | Service |

Details:

See P0701 (function of digital input 1).

| | | | | | | |
|-----------------|--|------------------------------|----------------------|----------------|---------------|---------------------------|
| P0719[2] | Selection of cmd. & freq. setp. | | | | Min: 0 | Level: 3 |
| | CStat: CT | Datatype: U16 | Unit: - | Def: 0 | | |
| | P-Group: COMMANDS | Active: First confirm | QuickComm. No | Max: 55 | | |

Central switch to select control command source for inverter.

Switches command and setpoint source between freely programmable BICO parameters and fixed command/setpoint profiles. Command and setpoint sources can be changed independently.

The tens digit chooses the command source and the units digit chooses the setpoint source.

The two indices of this parameter are used for local/remote switching. The local/remote signal switches between these settings.

The default setting is 0 for the first index (i.e. normal parameterization is active).

The second index is for control via BOP (i.e. activating the local/remote signal will then switch to BOP).

Enum:

| | | |
|----|-----------------------|----------------------------|
| 0 | Cmd = BICO parameter | Setpoint = BICO parameter |
| 1 | Cmd = BICO parameter | Setpoint = MOP setpoint |
| 2 | Cmd = BICO parameter | Setpoint = Analog setpoint |
| 3 | Cmd = BICO parameter | Setpoint = Fixed frequency |
| 4 | Cmd = BICO parameter | Setpoint = USS on BOP link |
| 5 | Cmd = BICO parameter | Setpoint = USS on COM link |
| 10 | Cmd = BOP | Setpoint = BICO parameter |
| 11 | Cmd = BOP | Setpoint = MOP setpoint |
| 12 | Cmd = BOP | Setpoint = Analog setpoint |
| 13 | Cmd = BOP | Setpoint = Fixed frequency |
| 15 | Cmd = BOP | Setpoint = USS on COM link |
| 40 | Cmd = USS on BOP link | Setpoint = BICO parameter |
| 41 | Cmd = USS on BOP link | Setpoint = MOP setpoint |
| 42 | Cmd = USS on BOP link | Setpoint = Analog setpoint |
| 43 | Cmd = USS on BOP link | Setpoint = Fixed frequency |
| 44 | Cmd = USS on BOP link | Setpoint = USS on BOP link |
| 45 | Cmd = USS on BOP link | Setpoint = USS on COM link |
| 50 | Cmd = USS on COM link | Setpoint = BICO parameter |
| 51 | Cmd = USS on COM link | Setpoint = MOP setpoint |
| 52 | Cmd = USS on COM link | Setpoint = Analog setpoint |
| 53 | Cmd = USS on COM link | Setpoint = Fixed frequency |
| 54 | Cmd = USS on COM link | Setpoint = USS on BOP link |
| 55 | Cmd = USS on COM link | Setpoint = USS on COM link |

Index:

P0719[0] : 1st Control source (Remote)
P0719[1] : 2nd Control source (Local)

Note:

BICO connections made previously remain unchanged.

| | | | | | | |
|--------------|-----------------------------------|----------------------|----------------------|---------------|---------------|---------------------------|
| r0722 | CO/BO: Binary input values | | | | Min: - | Level: 3 |
| | CStat: CT | Datatype: U16 | Unit: - | Def: - | | |
| | P-Group: COMMANDS | Active: - | QuickComm. No | Max: - | | |

Displays status of digital inputs.

Bitfields:

| | | | |
|-------|---------------------------|---|-----|
| Bit00 | Digital input 1 | 0 | OFF |
| | | 1 | ON |
| Bit01 | Digital input 2 | 0 | OFF |
| | | 1 | ON |
| Bit02 | Digital input 3 | 0 | OFF |
| | | 1 | ON |
| Bit03 | Digital input 4 (via ADC) | 0 | OFF |
| | | 1 | ON |

Note:

Segment is lit when signal is active.

| | | | | | | |
|--------------|---|----------------------------|----------------------|---------------|---------------|---------------------------|
| P0724 | Debounce time for digital inputs | | | | Min: 0 | Level: 3 |
| | CStat: CT | Datatype: U16 | Unit: - | Def: 3 | | |
| | P-Group: COMMANDS | Active: Immediately | QuickComm. No | Max: 3 | | |

Defines debounce time (filtering time) used for digital inputs.

Enum:

| | |
|---|-----------------------|
| 0 | No debounce time |
| 1 | 2.5 ms debounce time |
| 2 | 8.2 ms debounce time |
| 3 | 12.3 ms debounce time |

| | | | | | | |
|--------------|---|------------------------------|----------------------|--------------------|-----------------|---------------------------|
| P0731 | BI: Function of digital output 1 | | | | Min: 0:0 | Level: 2 |
| | CStat: CUT | Datatype: U32 | Unit: - | Def: 52:3 | | |
| | P-Group: COMMANDS | Active: First confirm | QuickComm. No | Max: 4000:0 | | |

Defines source of digital output 1.

Settings:

| | | | |
|------|--------------------------------------|---|--------|
| 52.0 | Drive ready | 0 | Closed |
| 52.1 | Drive ready to run | 0 | Closed |
| 52.2 | Drive running | 0 | Closed |
| 52.3 | Drive fault active | 0 | Closed |
| 52.4 | OFF2 active | 1 | Closed |
| 52.5 | OFF3 active | 1 | Closed |
| 52.6 | Switch on inhibit active | 0 | Closed |
| 52.7 | Drive warning active | 0 | Closed |
| 52.8 | Deviation setpoint/actual value | 1 | Closed |
| 52.9 | PZD control (Process Data Control) | 0 | Closed |
| 52.A | Maximum frequency reached | 0 | Closed |
| 52.B | Warning: Motor current limit | 1 | Closed |
| 52.C | Motor holding brake (MHB) active | 0 | Closed |
| 52.D | Motor overload | 1 | Closed |
| 52.E | Motor running direction right | 0 | Closed |
| 52.F | Inverter overload | 1 | Closed |
| 53.0 | DC brake active | 0 | Closed |
| 53.1 | Inverter freq. less switch off limit | 0 | Closed |
| 53.2 | Inverter freq. less minimum freq. | 0 | Closed |
| 53.6 | Act. freq. greater/equal setpoint | 0 | Closed |

| | | | | | | |
|--------------|--|----------------------|----------------|---------------|---------------|---------------------------|
| r0747 | CO/BO: State of digital outputs | | | | Min: - | Level: 3 |
| | | Datatype: U16 | Unit: - | Def: - | | |
| | P-Group: COMMANDS | | | Max: - | | |

Displays status of digital outputs (also includes inversion of digital outputs via P0748).

Bitfields:

| | | | |
|-------|----------------------------|---|-----|
| Bit00 | Digital output 1 energized | 0 | NO |
| | | 1 | YES |

Dependency:

Bit 0 0 = relay de-energized / contacts open
1 = relay energized / contacts closed

| | | | | | | |
|--------------|-------------------------------|------------------------------|----------------------|---------------|---------------|---------------------------|
| P0748 | Invert digital outputs | | | | Min: 0 | Level: 3 |
| | CStat: CUT | Datatype: U16 | Unit: - | Def: 0 | | |
| | P-Group: COMMANDS | Active: First confirm | QuickComm. No | Max: 1 | | |

Defines high and low states of relay for a given function.

Bitfields:

| | | | |
|-------|-------------------------|---|-----|
| Bit00 | Invert digital output 1 | 0 | NO |
| | | 1 | YES |

| | | | | | | |
|--------------|------------------------------|------------------------|----------------|---------------|---------------|---------------------------|
| r0752 | Act. input of ADC [V] | | | | Min: - | Level: 3 |
| | | Datatype: Float | Unit: - | Def: - | | |
| | P-Group: TERMINAL | | | Max: - | | |

Displays smoothed analog input value in volts before the characteristic block.

| | | | | | | |
|--------------|--------------------------|------------------------------|----------------------|-------------------|---------------|---------------------------|
| P0753 | Smooth time ADC | | | | Min: 0 | Level: 3 |
| | CStat: CUT | Datatype: U16 | Unit: ms | Def: 3 | | |
| | P-Group: TERMINAL | Active: First confirm | QuickComm. No | Max: 10000 | | |

Defines filter time (PT1 filter) in [ms] for analog input.

Note:

Increasing this smooth time reduces jitter but slows down response to the analog input.

P0753 = 0 : No filtering

| | | | | | | |
|--------------|---|------------------------|----------------|---------------|---------------|---------------------------|
| r0754 | Act. ADC value after scaling [%] | | | | Min: - | Level: 2 |
| | | Datatype: Float | Unit: % | Def: - | | |
| | P-Group: TERMINAL | | | Max: - | | |

Shows smoothed value of analog input in [%] after scaling block.


Dependency:

P0757 to P0760 define range (ADC scaling)

| | | | |
|--------------|------------------------------------|------------------------------|----------------------|
| P0757 | Value x1 of ADC scaling [V] | Min: 0 | Level: |
| | CStat: CUT | Datatype: Float | Unit: V |
| | P-Group: TERMINAL | Active: First confirm | QuickComm. No |
| | | Def: 0 | 3 |
| | | Max: 10 | |

Parameters P0757 - P0760 configure the input scaling as shown in the diagram:

P0761 = 0

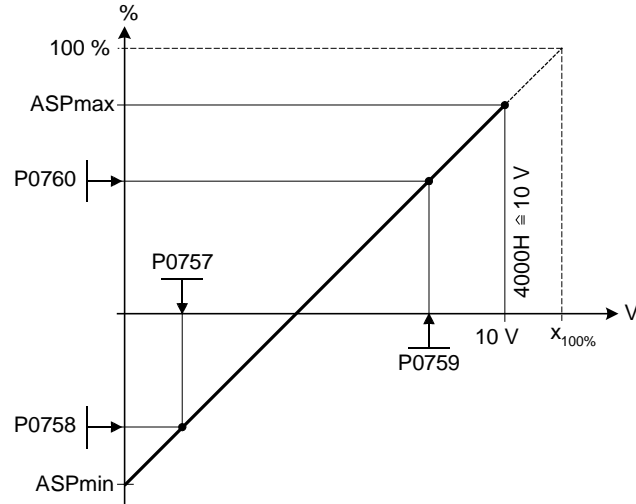

Where:

Analog setpoints represent a [%] of the normalized frequency in P2000.

Analog setpoints may be larger than 100 %

ASPmax represents highest analog setpoint (this may be at 10 V).

ASPmin represents lowest analog setpoint (this may be at 0 V).

Default values provide a scaling of 0 V = 0 %, and 10 V = 100 %.

| | | | |
|--------------|--------------------------------|------------------------------|----------------------|
| P0758 | Value y1 of ADC scaling | Min: -99999.9 | Level: |
| | CStat: CUT | Datatype: Float | Unit: % |
| | P-Group: TERMINAL | Active: First confirm | QuickComm. No |
| | | Def: 0.0 | 3 |
| | | Max: 99999.9 | |

Sets value of Y1 in [%] as described in P0757 (ADC scaling)

Dependency:

Affects P2000 (reference frequency).

| | | | |
|--------------|------------------------------------|------------------------------|----------------------|
| P0759 | Value x2 of ADC scaling [V] | Min: 0 | Level: |
| | CStat: CUT | Datatype: Float | Unit: V |
| | P-Group: TERMINAL | Active: First confirm | QuickComm. No |
| | | Def: 10 | 3 |
| | | Max: 10 | |

Sets value of X2 as described in P0757 (ADC scaling)

| | | | |
|--------------|--------------------------------|------------------------------|----------------------|
| P0760 | Value y2 of ADC scaling | Min: -99999.9 | Level: |
| | CStat: CUT | Datatype: Float | Unit: % |
| | P-Group: TERMINAL | Active: First confirm | QuickComm. No |
| | | Def: 100.0 | 3 |
| | | Max: 99999.9 | |

Sets value of Y2 in [%] as described in P0757 (ADC scaling)

Dependency:

Affects P2000 (reference frequency).

| | | | | | | |
|--------------|----------------------------------|------------------------------|----------------------|----------------|---------------|---------------------------|
| P0761 | Width of ADC deadband [V] | | | | Min: 0 | Level: 3 |
| | CStat: CUT | Datatype: Float | Unit: V | Def: 0 | | |
| | P-Group: TERMINAL | Active: First confirm | QuickComm. No | Max: 10 | | |


Defines width of deadband on analog input. The diagrams below explain its use

Example:

ADC value 2 to 10 V (0 to 50 Hz)
 The below example produces a 2 to 10 V analog input (0 to 50 Hz)
 P2000 = 50 Hz
 P0759 = 8 V P0760 = 75 %
 P0757 = 2 V P0758 = 0 %
 P0761 = 2 V

P0761 > 0

0 < P0758 < P0760 || 0 > P0758 > P0760

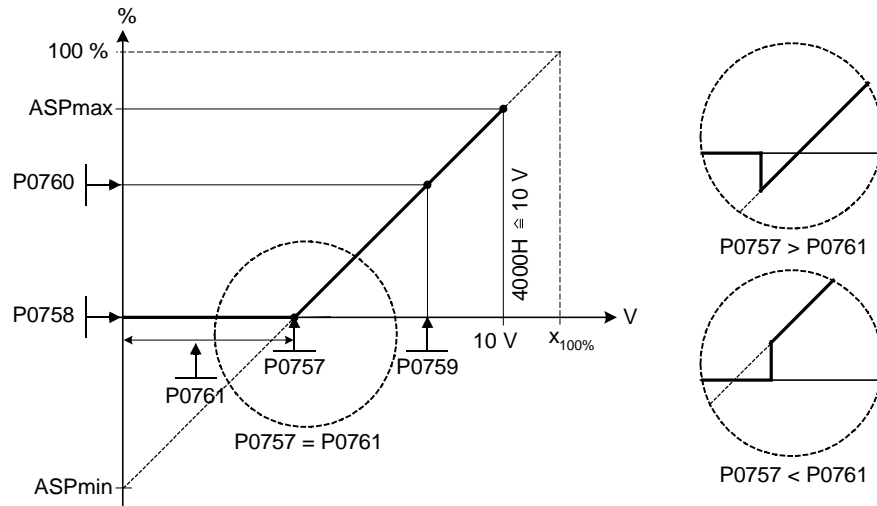


ADC value 0 to 10 V (-50 to +50 Hz)

The below example produces a 0 to 10 V analog input (-50 to +50 Hz) with center zero and a "holding point" 0.2 V wide (0.1 V to each side of center).
 P2000 = 50 Hz
 P0759 = 8 V P0760 = 75 %
 P0757 = 2 V P0758 = -75 %
 P0761 = 0.1 V

P0761 > 0

P0758 < 0 < P0760

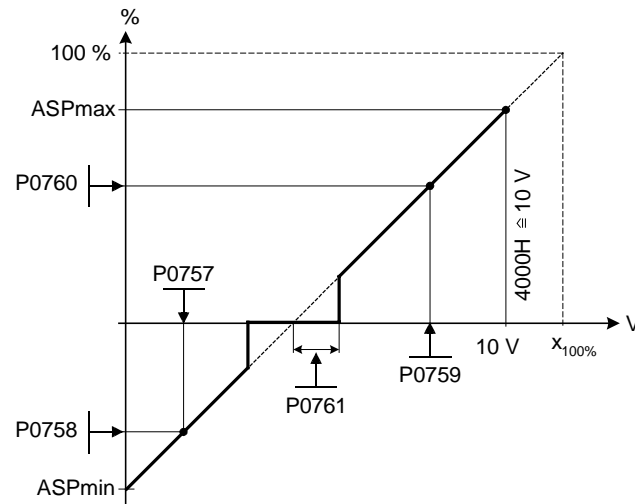

Note:

P0761= 0 : No deadband active.

Notice:

Deadband starts from 0 V to value of P0761, if both values of P0758 and P0760 (y coordinates of ADC scaling) are positive or negative respectively. However, deadband is active in both directions from point of intersection (x axis with ADC scaling curve), if sign of P0758 and P0760 are opposite.

Fmin (P1080) should be zero when using center zero setup. There is no hysteresis at the end of the deadband.

| | | | | | | |
|--------------|---------------------------------------|------------------------------|----------------------|--------------------|-----------------|---------------------------|
| P0810 | BI: CDS bit 0 (Local / Remote) | | | | Min: 0:0 | Level: 3 |
| | CStat: CUT | Datatype: U32 | Unit: - | Def: 0:0 | | |
| | P-Group: COMMANDS | Active: First confirm | QuickComm. No | Max: 4095:0 | | |

Selects command source from which to read Bit 0 for selecting a BICO data set (see control word 1, Bit 15).

Note:

Bit 1 is also relevant for BICO data set selection.

| | | | | | | |
|--------------|---------------------------------|------------------------------|----------------------|----------------|---------------|---------------------------|
| P0927 | Parameter changeable via | | | | Min: 0 | Level: 3 |
| | CStat: CUT | Datatype: U16 | Unit: - | Def: 15 | | |
| | P-Group: COMM | Active: First confirm | QuickComm. No | Max: 15 | | |

Specifies the interfaces which can be used to change parameters.

Example:

"b - - n n" (bits 0, 1, 2 and 3 set) in the default setting means that parameters can be changed via any interface.

"b - - r n" (bits 0, 1 and 3 set) would specify that parameters can be changed via BOP and USS on COM link but not via USS on BOP link.

Bitfields:

| | | | |
|-------|-----------------|---|-----|
| Bit00 | Not used | 0 | NO |
| | | 1 | YES |
| Bit01 | BOP | 0 | NO |
| | | 1 | YES |
| Bit02 | USS on BOP link | 0 | NO |
| | | 1 | YES |
| Bit03 | USS on COM link | 0 | NO |
| | | 1 | YES |

Details:

The seven-segment display is explained in the "Introduction to MICROMASTER 410 System Parameters" in this handbook.

| | | | | | |
|-----------------|------------------------|----------------------|----------------|---------------|---------------|
| r0947[8] | Last fault code | Datatype: U16 | Unit: - | Min: - | Level: |
| | P-Group: ALARMS | | | Def: - | 2 |
| | | | | Max: - | |

Displays fault history according to the diagram below


where:

"F1" is the first active fault (not yet acknowledged).

"F2" is the second active fault (not yet acknowledged).

"F1e" is the occurrence of the fault acknowledgement for F1 & F2.

This moves the value in the 2 indices down to the next pair of indices, where they are stored. Indices 0 & 1 contain the active faults. When faults are acknowledged, indices 0 & 1 are reset to 0.

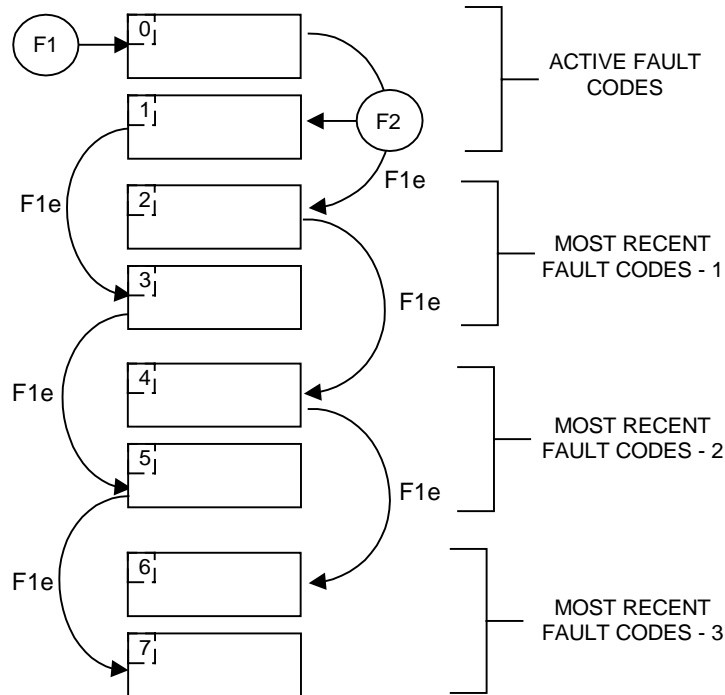

Example:

If the inverter trips on undervoltage and then receives an external trip before the undervoltage is acknowledged, you will obtain:

Index 0 = 3 Undervoltage

Index 1 = 85 External trip

Whenever a fault in index 0 is acknowledged (F1e), the fault history shifts as indicated in the diagram above.

Index:

r0947[0] : Recent fault trip --, fault 1
 r0947[1] : Recent fault trip --, fault 2
 r0947[2] : Recent fault trip -1, fault 3
 r0947[3] : Recent fault trip -1, fault 4
 r0947[4] : Recent fault trip -2, fault 5
 r0947[5] : Recent fault trip -2, fault 6
 r0947[6] : Recent fault trip -3, fault 7
 r0947[7] : Recent fault trip -3, fault 8

Dependency:

Index 2 used only if second fault occurs before first fault is acknowledged.

Details:

See "Faults and Warnings".

| | | | | | | | |
|-----------------|------------------------|----------------------|----------------|---------------|---------------|---------------|---------------|
| r0949[8] | Fault value | Datatype: U16 | Unit: - | Min: - | Def: - | Max: - | Level: |
| | P-Group: ALARMS | | | | | | 3 |

Displays drive fault values. It is for service purposes and indicate the type of fault reported. The values are not documented. They are listed in the code where faults are reported.

Index:

r0949[0] : Recent fault trip --, fault value 1
 r0949[1] : Recent fault trip --, fault value 2
 r0949[2] : Recent fault trip -1, fault value 3
 r0949[3] : Recent fault trip -1, fault value 4
 r0949[4] : Recent fault trip -2, fault value 5
 r0949[5] : Recent fault trip -2, fault value 6
 r0949[6] : Recent fault trip -3, fault value 7
 r0949[7] : Recent fault trip -3, fault value 8

| | | | | | | | |
|-----------------|------------------------------|----------------------|----------------|---------------|---------------|---------------|---------------|
| r0964[5] | Firmware version data | Datatype: U16 | Unit: - | Min: - | Def: - | Max: - | Level: |
| | P-Group: COMM | | | | | | 3 |

Firmware version data.

Example:

r0964[0] = 42 "SIEMENS"
 r0964[1] = 1001 "MICROMASTER 420"
 1002 "MICROMASTER 440"
 1003 "MICRO- / COMBIMASTER 411"
 1004 "MICROMASTER 410"
 1005 "Reserved"
 r0964[4] = 507 means 5th July.

Index:

r0964[0] : Company (Siemens = 42)
 r0964[1] : Product type
 r0964[2] : Firmware version
 r0964[3] : Firmware date (year)
 r0964[4] : Firmware date (day/month)

| | | | | | | | |
|--------------|--|------------------------------|----------------------|---------------|---------------|---------------|---------------|
| P0970 | Factory reset | Datatype: U16 | Unit: - | Min: 0 | Def: 0 | Max: 1 | Level: |
| | CStat: C P-Group: PAR_RESET | Active: First confirm | QuickComm. No | | | | 1 |

P0970 = 1 resets all parameters to their default values.

Enum:

0 Disabled
 1 Parameter reset

Dependency:

First set P0010 = 30 (factory settings)

Stop drive (i.e. disable all pulses) before you can reset parameters to default values.

Note:

The following parameters retain their values after a factory reset:

P2010 (USS baud rate) and
 P2011 (USS address)

| | | | | | | | |
|--------------|---|------------------------------|----------------------|---------------|---------------|---------------|---------------|
| P0971 | Transfer data from RAM to EEPROM | Datatype: U16 | Unit: - | Min: 0 | Def: 0 | Max: 1 | Level: |
| | CStat: CUT P-Group: COMM | Active: First confirm | QuickComm. No | | | | 3 |

Transfers values from RAM to EEPROM when set to 1.

Enum:

0 Disabled
 1 Start transfer

Note:

All values in RAM are transferred to EEPROM.

Parameter is automatically reset to 0 (default) after successful transfer.

| | | | | | | |
|--------------|--|------------------------------|-----------------------|----------------|---------------|---------------------------|
| P1000 | Selection of frequency setpoint | | | | Min: 0 | Level: 1 |
| | CStat: CT | Datatype: U16 | Unit: - | Def: 2 | | |
| | P-Group: SETPOINT | Active: First confirm | QuickComm. Yes | Max: 55 | | |

Selects frequency setpoint source. In the table of possible settings below, the main setpoint is selected from the least significant digit (i.e., 0 to 5) and any additional setpoint from the most significant digit (i.e., x0 through to x5).

Example:

Setting 12 selects main setpoint (2) derived from analog input with additional setpoint (1) taken from the motor potentiometer.

Settings:

- 1 Motor potentiometer setpoint
- 2 Analog input
- 3 Fixed frequency setpoint
- 4 USS on BOP link
- 5 USS on COM link

Other settings including an additional setpoint can be selected using the table below.

Enum:

- 0 No main setpoint
- 1 MOP setpoint
- 2 Analog setpoint
- 3 Fixed frequency
- 4 USS on BOP link
- 5 USS on COM link
- 10 No main setpoint + MOP setpoint
- 11 MOP setpoint + MOP setpoint
- 12 Analog setpoint + MOP setpoint
- 13 Fixed frequency + MOP setpoint
- 14 USS on BOP link + MOP setpoint
- 15 USS on COM link + MOP setpoint
- 20 No main setpoint + Analog setpoint
- 21 MOP setpoint + Analog setpoint
- 22 Analog setpoint + Analog setpoint
- 23 Fixed frequency + Analog setpoint
- 24 USS on BOP link + Analog setpoint
- 25 USS on COM link + Analog setpoint
- 30 No main setpoint + Fixed frequency
- 31 MOP setpoint + Fixed frequency
- 32 Analog setpoint + Fixed frequency
- 33 Fixed frequency + Fixed frequency
- 34 USS on BOP link + Fixed frequency
- 35 USS on COM link + Fixed frequency
- 40 No main setpoint + USS on BOP link
- 41 MOP setpoint + USS on BOP link
- 42 Analog setpoint + USS on BOP link
- 43 Fixed frequency + USS on BOP link
- 44 USS on BOP link + USS on BOP link
- 45 USS on COM link + USS on BOP link
- 50 No main setpoint + USS on COM link
- 51 MOP setpoint + USS on COM link
- 52 Analog setpoint + USS on COM link
- 53 Fixed frequency + USS on COM link
- 54 USS on BOP link + USS on COM link
- 55 USS on COM link + USS on COM link

Note:

Single digits denote main setpoints that have no additional setpoint.

| | | | | | |
|--------------|--------------------------|----------------------------|----------------------|---------------------|--------------------|
| P1001 | Fixed frequency 1 | | | Min: -650.00 | Level: 2 |
| | CStat: CUT | Datatype: Float | Unit: Hz | Def: 0.00 | |
| | P-Group: SETPOINT | Active: Immediately | QuickComm. No | Max: 650.00 | |

Defines fixed frequency setpoint 1.

There are 2 types of fixed frequencies:

1. Direct selection
2. Direct selection + ON command

1. Direct selection (P0701 - P0703 = 15)

In this mode of operation 1 digital input selects 1 fixed frequency.

If several inputs are active together, the selected frequencies are summed.

E.g.: FF1 + FF2 + FF3

2. Direct selection + ON command (P0701 - P0703 = 16)

The fixed frequency selection combines the fixed frequencies with an ON command.

In this mode of operation 1 digital input selects 1 fixed frequency.

If several inputs are active together, the selected frequencies are summed.

E.g.: FF1 + FF2 + FF3

Dependency:

Select fixed frequency operation (using P1000).

Inverter requires ON command to start in the case of direct selection (P0701 - P0703 = 15)

Note:

Fixed frequencies can be selected using the digital inputs, and can also be combined with an ON command.

| | | | | | |
|--------------|--------------------------|----------------------------|----------------------|---------------------|--------------------|
| P1002 | Fixed frequency 2 | | | Min: -650.00 | Level: 2 |
| | CStat: CUT | Datatype: Float | Unit: Hz | Def: 5.00 | |
| | P-Group: SETPOINT | Active: Immediately | QuickComm. No | Max: 650.00 | |

Defines fixed frequency setpoint 2.

Details:

See parameter P1001 (fixed frequency 1).

| | | | | | |
|--------------|--------------------------|----------------------------|----------------------|---------------------|--------------------|
| P1003 | Fixed frequency 3 | | | Min: -650.00 | Level: 2 |
| | CStat: CUT | Datatype: Float | Unit: Hz | Def: 10.00 | |
| | P-Group: SETPOINT | Active: Immediately | QuickComm. No | Max: 650.00 | |

Defines fixed frequency setpoint 3.

Details:

See parameter P1001 (fixed frequency 1).

| | | | | | |
|--------------|---------------------------------|------------------------|-----------------|---------------|--------------------|
| r1024 | CO: Act. fixed frequency | | | Min: - | Level: 3 |
| | | Datatype: Float | Unit: Hz | Def: - | |
| | P-Group: SETPOINT | | | Max: - | |

Displays sum total of selected fixed frequencies.

| | | | | | |
|--------------|-----------------------------------|----------------------------|----------------------|---------------|--------------------|
| P1031 | Setpoint memory of the MOP | | | Min: 0 | Level: 2 |
| | CStat: CUT | Datatype: U16 | Unit: - | Def: 0 | |
| | P-Group: SETPOINT | Active: Immediately | QuickComm. No | Max: 1 | |

Saves last motor potentiometer setpoint (MOP) that was active before OFF command or power down.

Enum:

- | | |
|---|--|
| 0 | MOP setpoint will not be stored |
| 1 | MOP setpoint will be stored (P2240 is updated) |

Note:

On next ON command, motor potentiometer setpoint will be the saved value in parameter P1040 (setpoint of the MOP).

| | | | | | |
|--------------|---|------------------------------|----------------------|---------------|--------------------|
| P1032 | Inhibit reverse direction of MOP | | | Min: 0 | Level: 3 |
| | CStat: CT | Datatype: U16 | Unit: - | Def: 1 | |
| | P-Group: SETPOINT | Active: First confirm | QuickComm. No | Max: 1 | |

Inhibits reverse setpoint selection

Enum:

- | | |
|---|------------------------------|
| 0 | Reverse direction is allowed |
| 1 | Reverse direction inhibited |

Dependency:

Motor potentiometer (P1040) must be chosen as main setpoint or additional setpoint (using P1000).

Note:

It is possible to change motor direction using the motor potentiometer setpoint (increase / decrease frequency either by using digital inputs or BOP/AOP keypad up / down).

| | | | | | |
|--------------|----------------------------|----------------------------|----------------------|---------------------|--------------------|
| P1040 | Setpoint of the MOP | | | Min: -650.00 | Level: 3 |
| | CStat: CUT | Datatype: Float | Unit: Hz | Def: 5.00 | |
| | P-Group: SETPOINT | Active: Immediately | QuickComm. No | Max: 650.00 | |

Determines setpoint for motor potentiometer control (P1000 = 1).

Note:

If motor potentiometer setpoint is selected either as main setpoint or additional setpoint, the reverse direction will be inhibited by default of P1032 (inhibit reverse direction of MOP).

To re-enable reverse direction, set P1032 = 0.

| | | | | | |
|--------------|----------------------------|----------------------------|----------------------|--------------------|--------------------|
| P1058 | JOG frequency right | | | Min: 0.00 | Level: 3 |
| | CStat: CUT | Datatype: Float | Unit: Hz | Def: 5.00 | |
| | P-Group: SETPOINT | Active: Immediately | QuickComm. No | Max: 650.00 | |

Jogging increases the motor speed by small amounts. The JOG buttons uses a non-latching switch on one of the digital inputs to control the motor speed.

While JOG right is selected, this parameter determines the frequency at which the inverter will run.

Dependency:

P1060 and P1061 set up and down ramp times respectively for jogging.

| | | | | | |
|--------------|---------------------------|----------------------------|----------------------|--------------------|--------------------|
| P1059 | JOG frequency left | | | Min: 0.00 | Level: 3 |
| | CStat: CUT | Datatype: Float | Unit: Hz | Def: 5.00 | |
| | P-Group: SETPOINT | Active: Immediately | QuickComm. No | Max: 650.00 | |


While JOG left is selected, this parameter determines the frequency at which the inverter will run.

Dependency:

P1060 and P1061 set up and down ramp times respectively for jogging.

| | | | | | |
|--------------|--------------------------|------------------------------|----------------------|--------------------|--------------------|
| P1060 | JOG ramp-up time | | | Min: 0.00 | Level: 3 |
| | CStat: CUT | Datatype: Float | Unit: s | Def: 10.00 | |
| | P-Group: SETPOINT | Active: First confirm | QuickComm. No | Max: 650.00 | |

Sets jog ramp-up time. This is the time used while jogging is active.

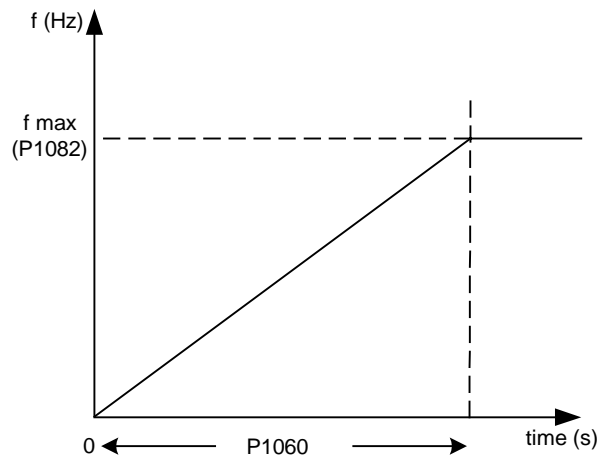


Notice:

Ramp times will be used as follows:
 P1060 / P1061 : JOG mode is active
 P1120 / P1121 : Normal mode (ON/OFF) is active

| | | | | | |
|--------------|---------------------------|------------------------------|----------------------|--------------------|--------------------|
| P1061 | JOG ramp-down time | | | Min: 0.00 | Level: 3 |
| | CStat: CUT | Datatype: Float | Unit: s | Def: 10.00 | |
| | P-Group: SETPOINT | Active: First confirm | QuickComm. No | Max: 650.00 | |

Sets ramp-down time. This is the time used while jogging is active.

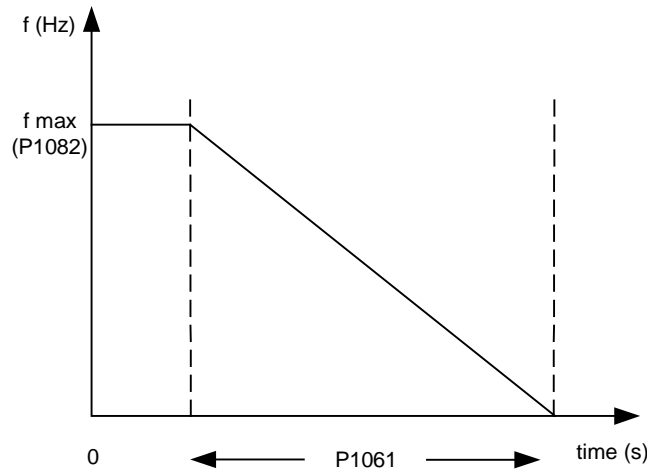**Notice:**

Ramp times will be used as follows:
P1060 / P1061 : JOG mode is active
P1120 / P1121 : Normal mode (ON/OFF) is active

| | | | | | |
|--------------|--------------------------|------------------------------|----------------------|--------------------|--------------------|
| P1070 | CI: Main setpoint | | | Min: 0.00 | Level: 3 |
| | CStat: CT | Datatype: U32 | Unit: - | Def: 755:0 | |
| | P-Group: SETPOINT | Active: First confirm | QuickComm. No | Max: 4000:0 | |

Defines source of main setpoint.

Settings:

755 = Analog input 1 setpoint
1024 = Fixed frequency setpoint
1050 = Motor potentiometer (MOP) setpoint

| | | | | | |
|--------------|--------------------------------|------------------------------|----------------------|--------------------|--------------------|
| P1075 | CI: Additional setpoint | | | Min: 0:0 | Level: 3 |
| | CStat: CT | Datatype: U32 | Unit: - | Def: 0:0 | |
| | P-Group: SETPOINT | Active: First confirm | QuickComm. No | Max: 4000:0 | |

Defines source of the additional setpoint (to be added to main setpoint).

Settings:

755 = Analog input 1 setpoint
1024 = Fixed frequency setpoint
1050 = Motor potentiometer (MOP) setpoint

| | | | | | |
|--------------|-------------------------------------|------------------------|-----------------|---------------|--------------------|
| r1078 | CO: Total frequency setpoint | | | Min: - | Level: 3 |
| | | Datatype: Float | Unit: Hz | Def: - | |
| | P-Group: SETPOINT | | | Max: - | |

Displays sum of main and additional setpoints in [Hz].

| | | | | | |
|--------------|--------------------------|----------------------------|-----------------------|--------------------|--------------------|
| P1080 | Min. frequency | | | Min: 0.00 | Level: 1 |
| | CStat: CUT | Datatype: Float | Unit: Hz | Def: 0.00 | |
| | P-Group: SETPOINT | Active: Immediately | QuickComm. Yes | Max: 650.00 | |

Sets minimum motor frequency [Hz] at which motor will run irrespective of frequency setpoint.

Note:

Value set here is valid both for clockwise and for anticlockwise rotation.

Under certain conditions (e.g. ramping, current limiting), motor can run below minimum frequency.

| | | | | | |
|--------------|--------------------------|------------------------------|-----------------------|--------------------|---------------------------|
| P1082 | Max. frequency | | | Min: 0.00 | Level: 1 |
| | CStat: CT | Datatype: Float | Unit: Hz | Def: 50.00 | |
| | P-Group: SETPOINT | Active: First confirm | QuickComm. Yes | Max: 650.00 | |

Sets maximum motor frequency [Hz] at which motor will run irrespective of the frequency setpoint.

Note:

The value set here is valid for both clockwise and anticlockwise rotation.

The maximum output frequency of inverter can be exceeded if one of the following is active:


- Slip compensation = $f_{max} + f_{slipcomp\ max}$
- or
- Flying restart = $f_{max} + f_{slipnom}$

Notice:

Maximum motor speed is subject to mechanical limitations.

| | | | | | |
|--------------|--------------------------|----------------------------|----------------------|--------------------|---------------------------|
| P1091 | Skip frequency 1 | | | Min: 0.00 | Level: 3 |
| | CStat: CUT | Datatype: Float | Unit: Hz | Def: 0.00 | |
| | P-Group: SETPOINT | Active: Immediately | QuickComm. No | Max: 650.00 | |

Defines skip frequency 1 which avoids effects of mechanical resonance and suppresses frequencies within +/- 2Hz (skip frequency bandwidth).

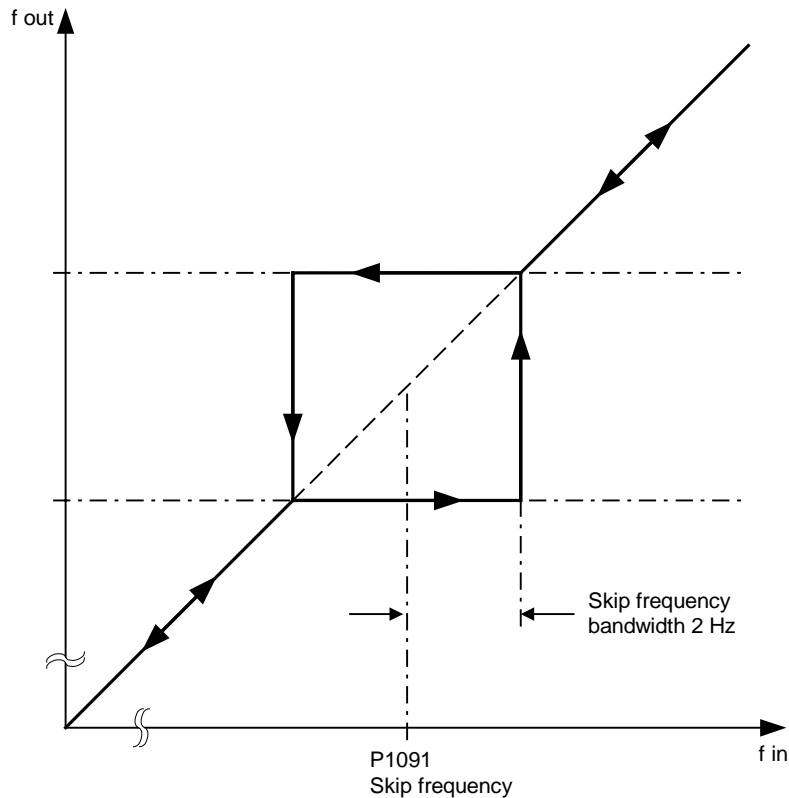


Notice:

Stationary operation is not possible within the suppressed frequency range; the range is merely passed through (on the ramp).

For example, if P1091 = 10 Hz it is not possible to operate continuously between 10 Hz +/- 2 Hz (i.e. between 8 and 12 Hz).

| | | | | | |
|--------------|--------------------------|------------------------------|-----------------------|--------------------|---------------------------|
| P1120 | Ramp-up time | | | Min: 0.00 | Level: 1 |
| | CStat: CUT | Datatype: Float | Unit: s | Def: 10.00 | |
| | P-Group: SETPOINT | Active: First confirm | QuickComm. Yes | Max: 650.00 | |

Time taken for motor to accelerate from standstill up to maximum motor frequency (P1082) when no rounding is used.

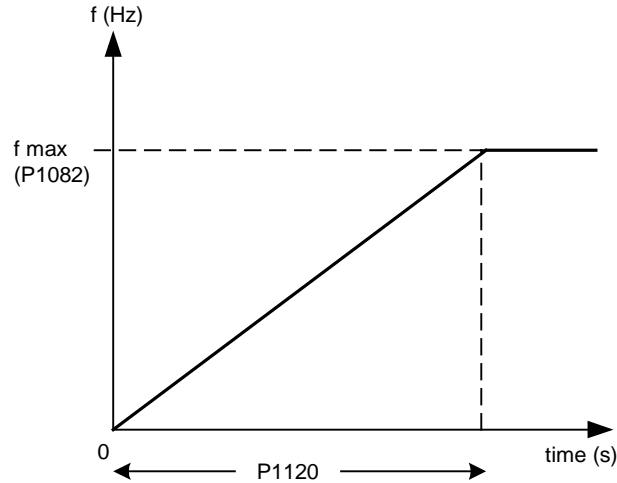

Setting the ramp-up time too short can cause the inverter to trip (overcurrent).

Note:


If an external frequency setpoint with set ramp rates is used (e.g. from a PLC), the best way to achieve optimum drive performance is to set ramp times in P1120 and P1121 slightly shorter than those of the PLC.

Notice:

Ramp times will be used as follows:
P1060 / P1061 : JOG mode is active
P1120 / P1121 : Normal mode (ON/OFF) is active

| | | | | | |
|--------------|--------------------------|------------------------------|-----------------------|--------------------|---------------------------|
| P1121 | Ramp-down time | | | Min: 0.00 | Level: 1 |
| | CStat: CUT | Datatype: Float | Unit: s | Def: 10.00 | |
| | P-Group: SETPOINT | Active: First confirm | QuickComm. Yes | Max: 650.00 | |

Time taken for motor to decelerate from maximum motor frequency (P1082) down to standstill when no rounding is used.

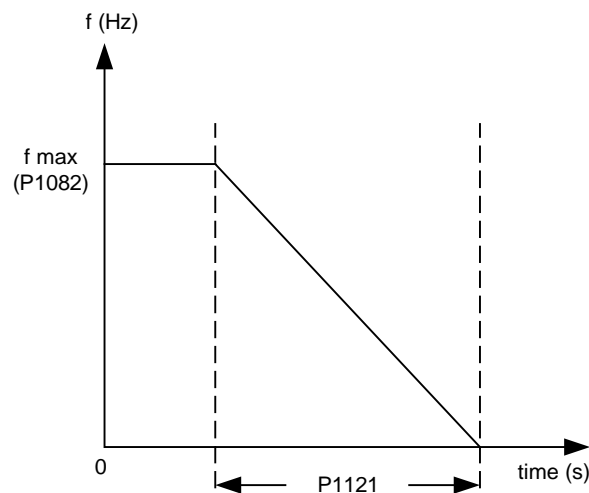
**Notice:**

Setting the ramp-down time too short can cause the inverter to trip (overcurrent (F0001) / overvoltage (F0002)).

Ramp times will be used as follows:
P1060 / P1061 : JOG mode is active
P1120 / P1121 : Normal mode (ON/OFF) is active

| | | | | |
|--------------|--------------------------------------|------------------------------|---------------------------|----------------------|
| P1130 | Ramp-up initial rounding time | Min: 0.00 | Level: 3 | |
| | CStat: CUT | Datatype: Float | | Unit: s |
| | P-Group: SETPOINT | Active: First confirm | | QuickComm. No |
| | | Def: 0.00 | | |
| | | Max: 40.00 | | |

Defines initial rounding time in seconds as shown on the diagram below.

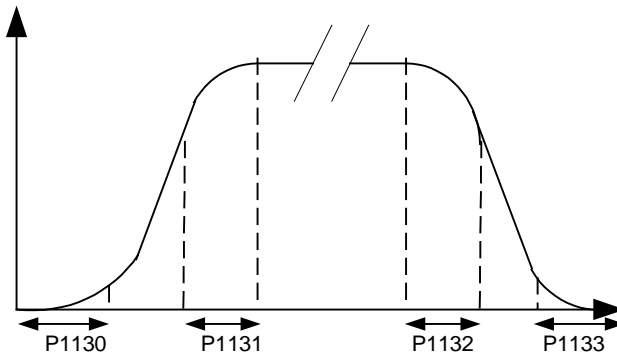

where:

$$T_{up\ total} = \frac{1}{2} P1130 + X * P1120 + \frac{1}{2} P1131$$

$$T_{down\ total} = \frac{1}{2} P1130 + X * P1121 + \frac{1}{2} P1133$$

X is defined as: $X = \Delta f / f_{max}$

i.e. X is the ratio between the frequency step and f_{max}

- Note:** Rounding times are recommended, since they prevent an abrupt response, thus avoiding detrimental effects on the mechanics.
- Notice:** Rounding times are not recommended when analog inputs are used, since they would result in overshoot/undershoot in the inverter response.

| | | | | |
|--------------|------------------------------------|------------------------------|---------------------------|----------------------|
| P1131 | Ramp-up final rounding time | Min: 0.00 | Level: 3 | |
| | CStat: CUT | Datatype: Float | | Unit: s |
| | P-Group: SETPOINT | Active: First confirm | | QuickComm. No |
| | | Def: 0.00 | | |
| | | Max: 40.00 | | |

Defines rounding time at end of ramp-up as shown in P1130 (ramp-up initial rounding time).

- Note:** Rounding times are recommended, since they prevent an abrupt response, thus avoiding detrimental effects on the mechanics.
- Notice:** Rounding times are not recommended when analog inputs are used, since they would result in overshoot/undershoot in the inverter response.

| | | | | |
|--------------|--|------------------------------|---------------------------|----------------------|
| P1132 | Ramp-down initial rounding time | Min: 0.00 | Level: 3 | |
| | CStat: CUT | Datatype: Float | | Unit: s |
| | P-Group: SETPOINT | Active: First confirm | | QuickComm. No |
| | | Def: 0.00 | | |
| | | Max: 40.00 | | |

Defines rounding time at start of ramp-down as shown in P1130 (ramp-up initial rounding time).

- Note:** Rounding times are recommended, since they prevent an abrupt response, thus avoiding detrimental effects on the mechanics.
- Notice:** Rounding times are not recommended when analog inputs are used, since they would result in overshoot/undershoot in the inverter response.


| | | | | |
|--------------|--------------------------------------|------------------------------|---------------------------|----------------------|
| P1133 | Ramp-down final rounding time | Min: 0.00 | Level: 3 | |
| | CStat: CUT | Datatype: Float | | Unit: s |
| | P-Group: SETPOINT | Active: First confirm | | QuickComm. No |
| | | Def: 0.00 | | |
| | | Max: 40.00 | | |

Defines rounding time at end of ramp-down as shown in P1130 (ramp-up initial rounding time).

- Note:** Rounding times are recommended, since they prevent an abrupt response, thus avoiding detrimental effects on the mechanics.
- Notice:** Rounding times are not recommended when analog inputs are used, since they would result in overshoot/undershoot in the inverter response.

| | | | | |
|--------------|--------------------------|----------------------------|---------------------------|----------------------|
| P1134 | Rounding type | Min: 0 | Level: 3 | |
| | CStat: CUT | Datatype: U16 | | Unit: - |
| | P-Group: SETPOINT | Active: Immediately | | QuickComm. No |
| | | Def: 0 | | |
| | | Max: 1 | | |

Defines smoothing response to OFF commands or setpoint reduction.

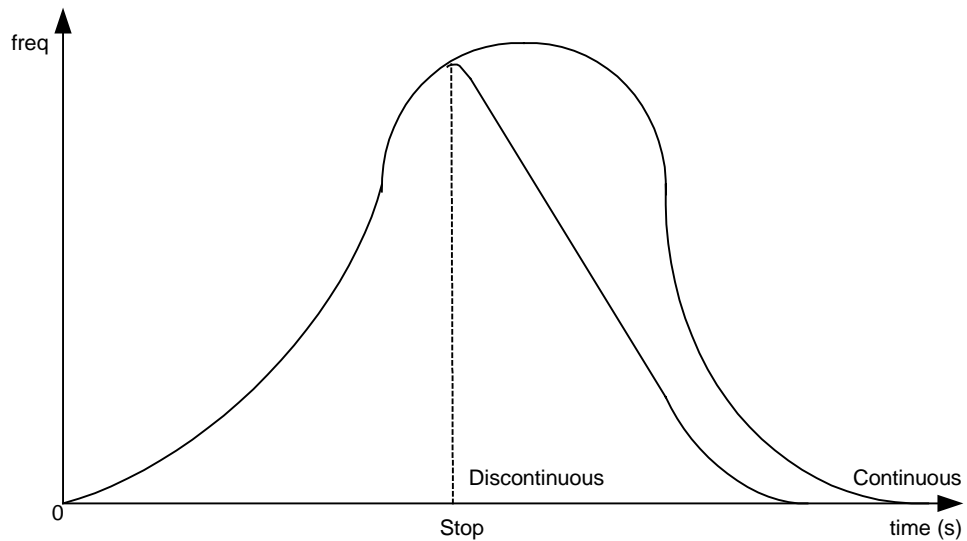**Enum:**

- 0 Continuous smoothing
- 1 Discontinuous smoothing

Dependency:

No effect until total rounding time (P1130) > 0 s.

Notice:

Rounding times are not recommended when analog inputs are used, since they would result in overshoot/undershoot in the inverter response.

| | | | | |
|--------------|----------------------------|------------------------------|---------------------------|-----------------------|
| P1135 | OFF3 ramp-down time | Min: 0.00 | Level: 3 | |
| | CStat: CUT | Datatype: Float | | Unit: s |
| | P-Group: SETPOINT | Active: First confirm | | QuickComm. Yes |
| | | Def: 5.00 | | |
| | | Max: 650.00 | | |

Defines ramp-down time from maximum frequency to standstill for OFF3 command.

Note:


This time may be exceeded if the VDC_max. level is reached.

| | | | | |
|--------------|---|------------------------|---------------------------|-----------------------|
| r1170 | CO: Frequency setpoint after RFG | Min: - | Level: 3 | |
| | | Datatype: Float | | Unit: Hz |
| | P-Group: SETPOINT | Active: - | | QuickComm. Yes |
| | | Def: - | | |
| | | Max: - | | |

Displays overall frequency setpoint after ramp generator.

| | | | | | |
|--------------|----------------------|----------------------------|----------------------|---------------|---------------------------|
| P1200 | Flying start | | | Min: 0 | Level: 3 |
| | CStat: CUT | Datatype: U16 | Unit: - | Def: 0 | |
| | P-Group: FUNC | Active: Immediately | QuickComm. No | Max: 6 | |

Starts inverter onto a spinning motor by rapidly changing the output frequency of the inverter until the actual motor speed has been found. Then, the motor runs up to setpoint using the normal ramp time.

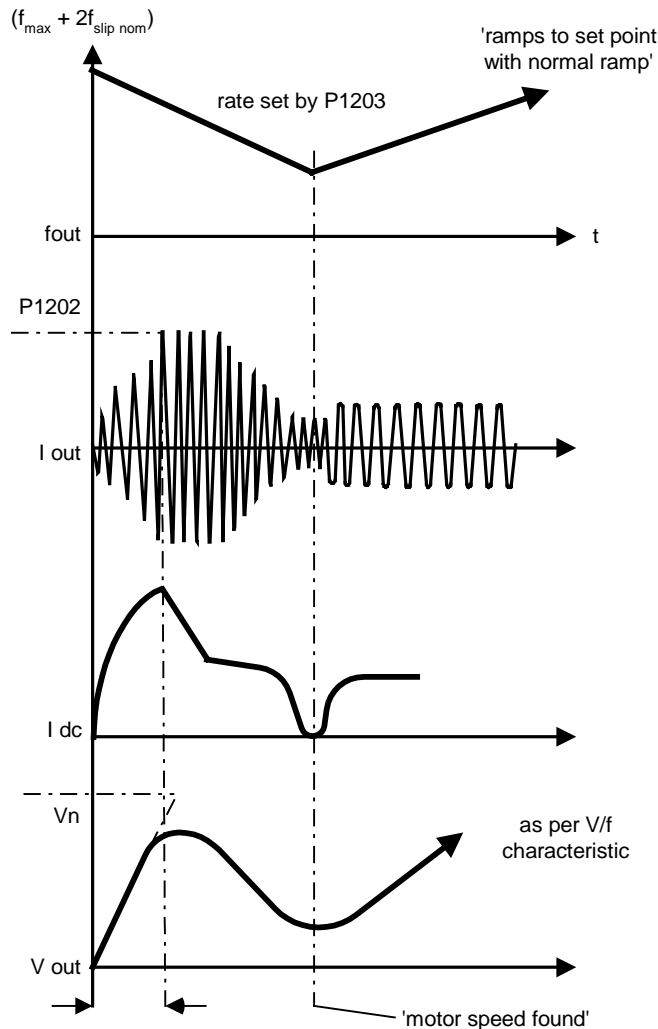

- Enum:**
- 0 Flying start disabled
 - 1 Flying start is always active, start in direction of setpoint
 - 2 Flying start is active if power on, fault, OFF2, start in direction of setpoint
 - 3 Flying start is active if fault, OFF2, start in direction of setpoint
 - 4 Flying start is always active, only in direction of setpoint
 - 5 Flying start is active if power on, fault, OFF2, only in direction of setpoint
 - 6 Flying start is active if fault, OFF2, only in direction of setpoint

Note: Useful for motors with high inertia loads.

Settings 1 to 3 search in both directions.
Settings 4 to 6 search only in direction of setpoint.

Notice: Flying start must be used in cases where the motor may still be turning (e.g. after a short mains break) or can be driven by the load. Otherwise, overcurrent trips will occur.

| | | | | | |
|--------------|------------------------------------|----------------------------|----------------------|-----------------|---------------------------|
| P1202 | Motor-current: Flying start | | | Min: 10 | Level: 3 |
| | CStat: CUT | Datatype: U16 | Unit: % | Def: 100 | |
| | P-Group: FUNC | Active: Immediately | QuickComm. No | Max: 200 | |


Defines search current used for flying start.

Value is in [%] based on rated motor current (P0305).

Note: Reducing the search current may improve performance for flying start if the inertia of the system is not very high.

| | | | | |
|--------------|----------------------------------|----------------------------|---------------------------|---|
| P1203 | Search rate: Flying start | Min: 10 | Level: 3 | |
| | CStat: CUT | Datatype: U16 | | Unit: % |
| | P-Group: FUNC | Active: Immediately | | QuickComm. No Def: 100 Max: 200 |

Sets factor by which the output frequency changes during flying start to synchronize with turning motor. This value is entered in [%] relative to the default time factor defines the initial gradient in the curve below (and thus influences the time taken to search for the motor frequency):

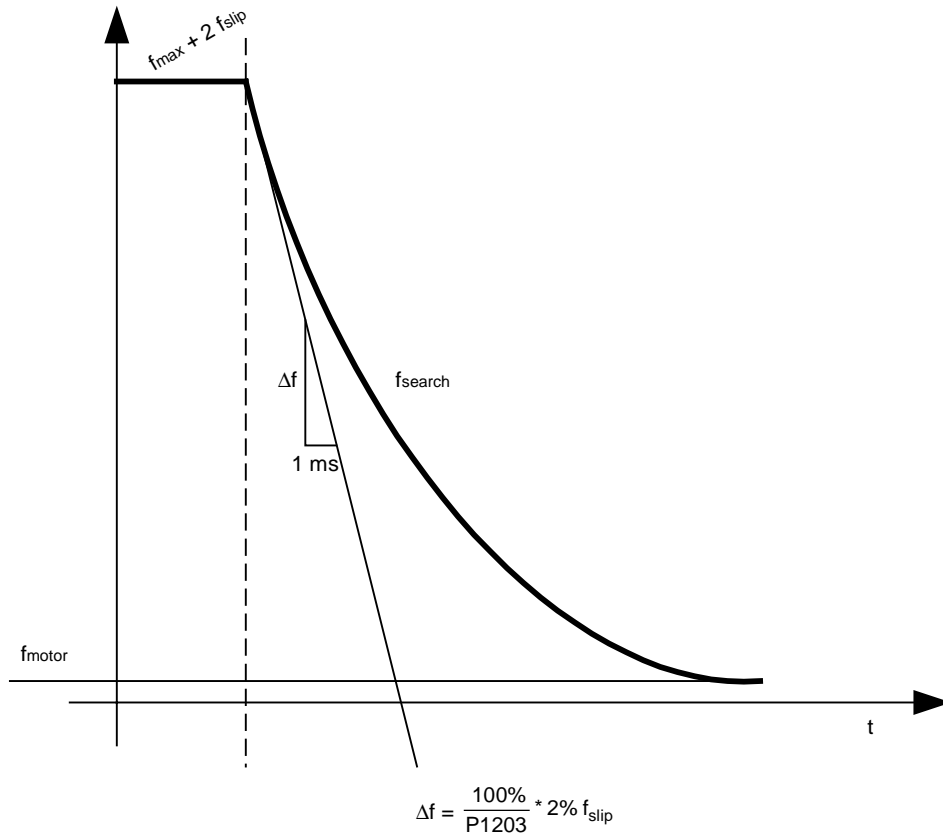

The search time is the time taken to search through all frequencies between $f_{max} + 2 \times f_{slip}$ to 0 Hz.

P1203 = 100 % is defined as giving a rate of 2 % of $f_{slip,nom}$ / [ms]

P1203 = 200 % would result in a rate of frequency change of 1 % of $f_{slip,nom}$ / [ms]

Example:

For a motor with 50 Hz, 1350 rpm, 100 % would produce a maximum search time of 600 ms. If the motor is turning, the motor frequency is found in a shorter time.

Note:

A higher value produces a flatter gradient and thus a longer search time.
A lower value has the opposite effect.

| | | | | |
|--------------|--------------------------|----------------------------|---------------------------|---|
| P1210 | Automatic restart | Min: 0 | Level: 2 | |
| | CStat: CUT | Datatype: U16 | | Unit: - |
| | P-Group: FUNC | Active: Immediately | | QuickComm. No Def: 1 Max: 5 |

Enables restart after a mains break or after a fault.

Enum:

- 0 Disabled
- 1 Trip reset after power on
- 2 Restart mains break; power on
- 3 Restart after fault/mains break
- 4 Restart after mains break
- 5 Restart mains break/fault/power on

Dependency:

Auto restart requires constant ON command (e.g. via a digital input wire link).

Caution1:

Settings 2 to 5 can cause the motor to restart unexpectedly !


Notice:

Flying start must be used in cases where the motor may still be turning (e.g. after a short mains break) or can be driven by the load (P1200).

| | | | | |
|--------------|-----------------------------|----------------------------|---------------------------|----------------------|
| P1215 | Holding brake enable | Min: 0 | Level: 3 | |
| | CStat: T | Datatype: U16 | | Unit: - |
| | P-Group: FUNC | Active: Immediately | | QuickComm. No |

Enables/disables holding brake function. This function applies the following profile to the inverter:

Relay switching is also possible at point 1 and point 2 (if programmed in P0731 = 52.C) to control a brake.

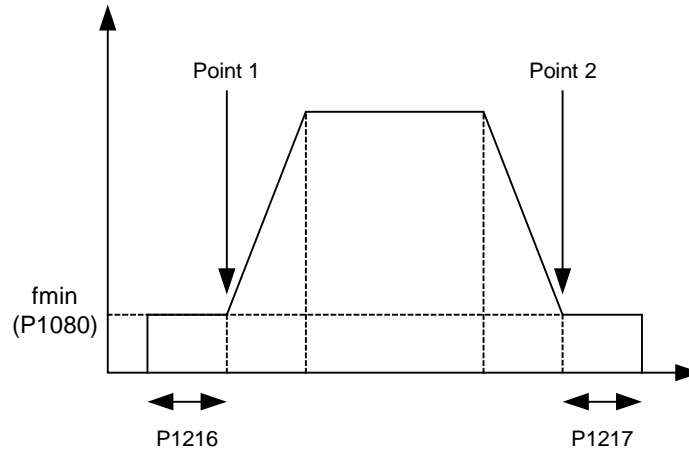

- Enum:**
- 0 Motor holding brake disabled
 - 1 Motor holding brake enabled

Note: The brake relay opens at point 1, if enabled using P0731 (function of digital output), and closes at point 2.

| | | | | |
|--------------|------------------------------------|----------------------------|---------------------------|----------------------|
| P1216 | Holding brake release delay | Min: 0 | Level: 3 | |
| | CStat: T | Datatype: Float | | Unit: s |
| | P-Group: FUNC | Active: Immediately | | QuickComm. No |

Defines period during which inverter runs at f_min before ramping up at point 1 (as shown in P1215 - holding brake enable). Inverter starts at f_min on this profile, i.e. it does not use a ramp.

Note: A typical value of f_min for this type of application is the slip frequency of the motor.

You can calculate the rated slip frequency by using the following formula:

$$\frac{n_{syn} - n_n}{n_{syn}} * f_n$$

Notice: If used to hold the motor at a certain frequency against a mechanical brake (i.e. you are using a relay to control mechanical brake), it is important that f_min < 5 Hz; otherwise, the current drawn may be too high and the relay may not open.

| | | | | |
|--------------|-------------------------------------|----------------------------|---------------------------|----------------------|
| P1217 | Holding time after ramp down | Min: 0 | Level: 3 | |
| | CStat: T | Datatype: Float | | Unit: s |
| | P-Group: FUNC | Active: Immediately | | QuickComm. No |

Defines time for which inverter runs at minimum frequency (P1080) after ramping down at point 2.

Details: See diagram P1215 (holding brake enable)

| | | | | |
|--------------|---------------------------|----------------------------|---------------------------|----------------------|
| P1232 | DC braking current | Min: 0 | Level: 3 | |
| | CStat: CUT | Datatype: U16 | | Unit: % |
| | P-Group: FUNC | Active: Immediately | | QuickComm. No |

Defines level of DC current in [%] relative to rated motor current (P0305).

| | | | | |
|--------------|-------------------------------|----------------------------|---------------------------|----------------------|
| P1233 | Duration of DC braking | Min: 0 | Level: 3 | |
| | CStat: CUT | Datatype: U16 | | Unit: s |
| | P-Group: FUNC | Active: Immediately | | QuickComm. No |

Defines duration for which DC injection braking is to be active following an OFF1 command.

- Value:**
- P1233 = 0 : Not active following OFF1.
 - P1233 = 1 - 250 : Active for the specified duration.

Caution2: Frequent use of long periods of DC braking can cause the motor to overheat.

Notice: The DC braking function causes the motor to stop rapidly by applying a DC braking current (the current applied also holds the shaft stationary). When the DC braking signal is applied, the inverter output pulses

are blocked and the DC current not applied until the motor has been sufficiently demagnetized (demagnetization time is calculated automatically from motor data).

| | | | | |
|--------------|---------------------------------|----------------------------|---------------------------|--------------------------------------|
| P1236 | Compound braking current | Min: 0 | Level: 3 | |
| | CStat: CUT | Datatype: U16 | | Unit: % |
| | P-Group: FUNC | Active: Immediately | | QuickComm. No Max: 250 |

Defines DC level superimposed on AC waveform after OFF1 / OFF3 command. The value is entered in [%] relative to rated motor current (P0305).

230V type:

Compound braking switch - on level = $1.13 * \sqrt{2} * V_{mains} = 1,13 * \sqrt{2} * P0210$

115V type:

Compound braking switch - on level = $1.13 * \sqrt{2} * V_{mains} * 2 = 1,13 * \sqrt{2} * P0210 * 2$

Value:

P1236 = 0 : Compound braking disabled.

P1236 = 1 - 250 : Level of DC braking current defined as a [%] of rated motor current (P0305).

Dependency:

Active after OFF1 / OFF3 command.

Notice:

Increasing the value will generally improve braking performance; however, if you set the value too high, an overcurrent trip may result.

| | | | | |
|--------------|--|----------------------------|---------------------------|------------------------------------|
| P1240 | Configuration of Vdc controller | Min: 0 | Level: 3 | |
| | CStat: CT | Datatype: U16 | | Unit: - |
| | P-Group: FUNC | Active: Immediately | | QuickComm. No Max: 1 |

Enables / disables Vdc controller.

The Vdc controller dynamically controls the DC link voltage to prevent overvoltage trips on high inertia systems.

Enum:


0 Vdc controller disabled
1 Vdc-max controller enabled

Note:

Vdc max automatically increases ramp-down times to keep the DC-link voltage (r0026) within limits.

| | | | | |
|--------------|-------------------------|----------------------------|---------------------------|-------------------------------------|
| P1300 | Control mode | Min: 0 | Level: 2 | |
| | CStat: CT | Datatype: U16 | | Unit: - |
| | P-Group: CONTROL | Active: Immediately | | QuickComm. Yes Max: 3 |

Controls relationship between speed of motor and voltage supplied by inverter as illustrated in the diagram below

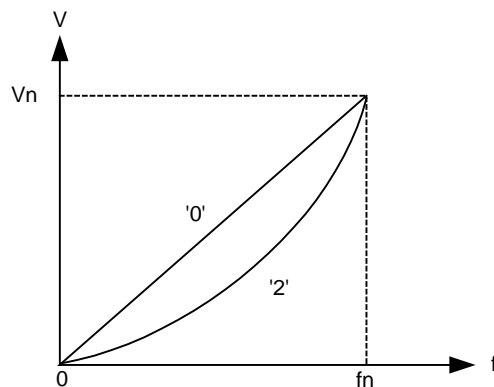

Enum:

0 V/f with linear charac.
1 V/f with FCC
2 V/f with parabolic charac.
3 V/f with programmable charac.

Note:

P1300 = 1 : V/f with FCC

* Maintains motor flux current for improved efficiency

* If FCC is chosen, linear V/f is active at low frequencies.



P1300 = 2 : V/f with a quadratic curve

* Suitable for centrifugal fans / pumps

| | | | | | |
|--------------|-------------------------|----------------------------|----------------------|-------------------|---------------------------|
| P1310 | Continuous boost | Datatype: Float | Unit: % | Min: 0.0 | Level: 2 |
| | CStat: CUT | Active: Immediately | QuickComm. No | Def: 50.0 | |
| | P-Group: CONTROL | | | Max: 250.0 | |

At low output frequencies the output voltage is low to keep the flux level constant. However, the output voltage may be too low
 - for magnetisation the asynchronous motor
 - to hold the load
 - to overcome losses in the system. The output voltage can be increased using parameter P1310.

Defines boost level in [%] relative to P0305 (rated motor current) applicable to both linear and quadratic V/f curves according to the diagram below:

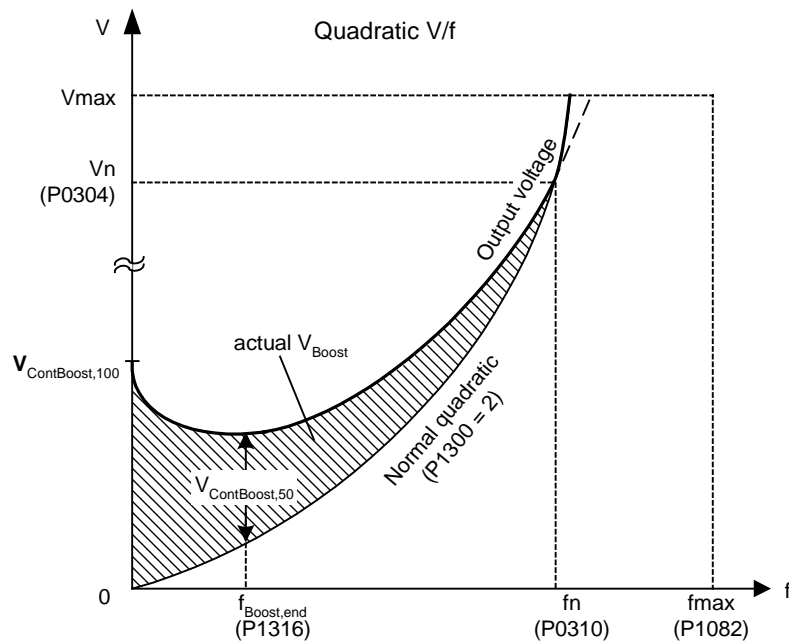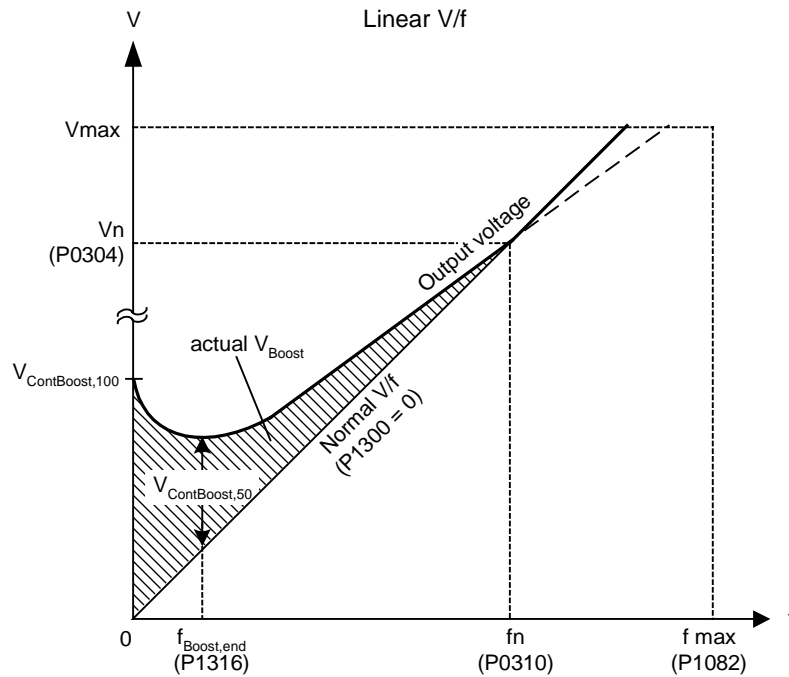

where voltage values are given

$$V_ConBoost,100 = \text{rated motor current (P0305)} * \text{Stator resistance} * \text{Continuous boost (P1310)}$$

$$V_ConBoost,50 = V_ConBoost,100 / 2$$

Dependency:

Setting in P0640 (motor overload factor [%]) limits the boost.

Note:

The boost values are combined when continuous boost (P1310) used in conjunction with other boost parameters (acceleration boost P1311 and starting boost P1312). However priorities are allocated to these parameters as follows:
P1310 > P1311 > P1312

Notice:


Increasing the boost levels increases motor heating (especially at standstill).

$$\sum \text{Boosts} \leq \frac{300}{I_{mot}} * R_s$$

| | | | | | |
|--------------|---------------------------|----------------------------|----------------------|-------------------|---------------------------|
| P1311 | Acceleration boost | Datatype: Float | Unit: % | Min: 0.0 | Level: 3 |
| | CStat: CUT | Active: Immediately | QuickComm. No | Def: 0.0 | |
| | P-Group: CONTROL | | | Max: 250.0 | |

P1311 will only produce boost during ramping, and is therefore useful for additional torque during acceleration.

Applies boost in [%] relative to P0305 (rated motor current) following a positive setpoint change and drops back out once the setpoint is reached.

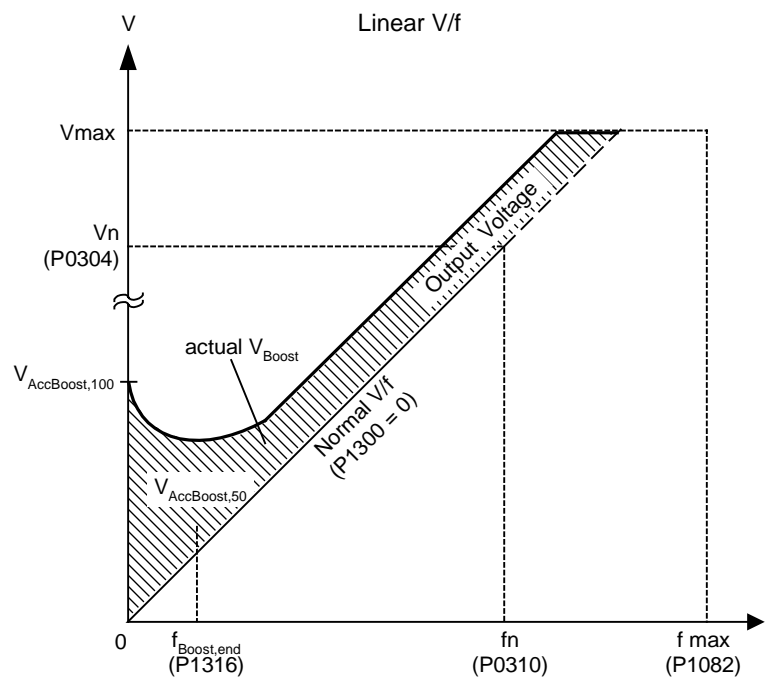

where voltage values are given

$$V_AccBoost,100 = \text{rated motor current (P0305)} * \text{Stator resistance} * \text{Acceleration boost (P1311)}$$

$$V_AccBoost,50 = V_AccBoost,100 / 2$$

Dependency:

Setting in P0640 (motor overload factor [%]) limits boost.

Note:

Acceleration boost can help to improve response to small positive setpoint changes.

$$\sum \text{Boosts} \leq \frac{300}{I_{mot}} * R_s$$

Notice:

Increasing the boost level increases motor heating.


Details:

See note in P1310 for boost priorities.

| | | | | | |
|--------------|-------------------------|----------------------------|----------------------|-------------------|---------------------------|
| P1312 | Starting boost | | | Min: 0.0 | Level: 2 |
| | CStat: CUT | Datatype: Float | Unit: % | Def: 0.0 | |
| | P-Group: CONTROL | Active: Immediately | QuickComm. No | Max: 250.0 | |

Applies a constant linear offset (in [%] relative to P0305 (rated motor current)) to active V/f curve (either linear or quadratic) after an ON command and is active until setpoint is reached for the first time. This is useful for starting loads with high inertia.

Setting the starting boost (P1312) too high will cause the inverter to limit the current, which will in turn restrict the output frequency to below the setpoint frequency.

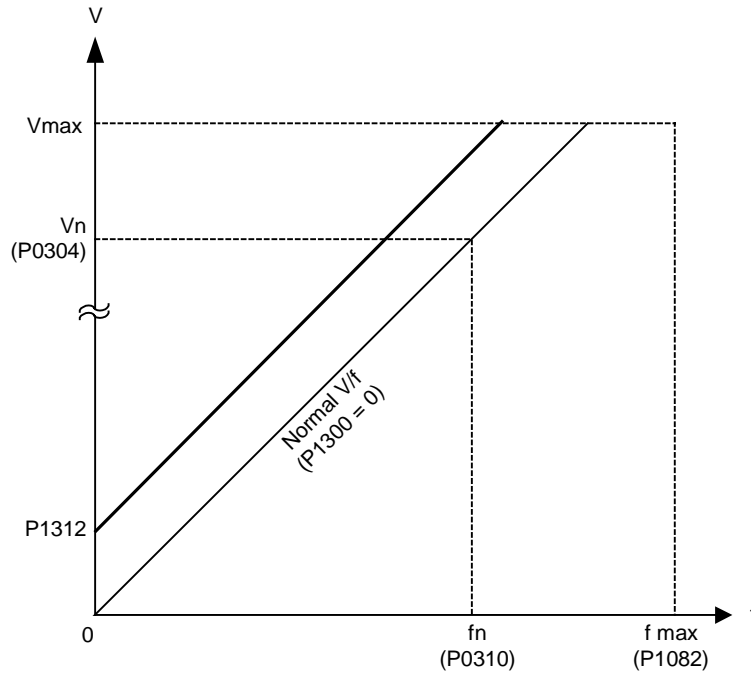

Dependency:

Setting in P0640 (motor overload factor [%]) limits boost.

Notice:

Increasing the boost levels increases motor heating.

$$\sum \text{Boosts} \leq \frac{300}{I_{mot}} * R_s$$

Details:

See note in P1310 for boost priorities.

| | | | | | |
|--------------|----------------------------|----------------------------|----------------------|-------------------|---------------------------|
| P1316 | Boost end frequency | | | Min: 0.0 | Level: 3 |
| | CStat: CUT | Datatype: Float | Unit: % | Def: 20.0 | |
| | P-Group: CONTROL | Active: Immediately | QuickComm. No | Max: 100.0 | |

Defines point at which programmed boost reaches 50 % of its value.

This value is expressed in [%] relative to P0310 (rated motor frequency).

This frequency is defined as follows:

$$f_{\text{Boost min}} = 2 * \left(\frac{153}{\sqrt{P_{\text{motor}}}} + 3 \right)$$

Note:


The expert user may change this value to alter the shape of the curve, e.g. to increase torque at a particular frequency.

Details:

See diagram in P1310 (continuous boost)

| | | | | | | |
|--------------|--|----------------------------|----------------------|--------------------|------------------|---------------------------|
| P1320 | Programmable V/f freq. coord. 1 | | | | Min: 0.00 | Level: 3 |
| | CStat: CT | Datatype: Float | Unit: Hz | Def: 0.00 | | |
| | P-Group: CONTROL | Active: Immediately | QuickComm. No | Max: 650.00 | | |

Sets V/f coordinates (P1320/1321 to P1324/1325) to define V/f characteristic.

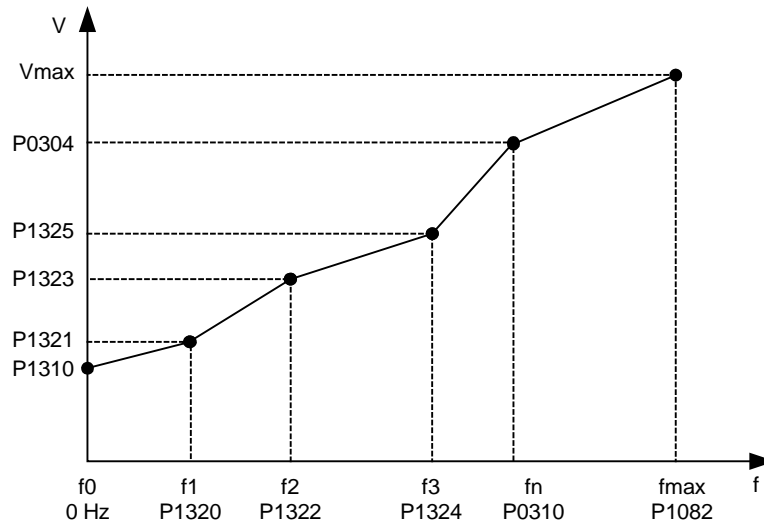**Example:**

This parameter can be used to provide correct torque at correct frequency and is useful when used with synchronous motors.

Dependency:

To set parameter, select P1300 = 3 (V/f with programmable characteristic)

Note:

Linear interpolation will be applied between points set from P1320/1321 to P1324/1325.

V/f with programmable characteristic (P1300 = 3) has 3 programmable points. The two non-programmable points are:

Continuous boost P1310 at 0 Hz

Rated motor voltage P0304 at rated motor frequency P0310

The acceleration boost and starting boost defined in P1311 and P1312 are applied to V/f with programmable characteristic.

| | | | | | | |
|--------------|--|----------------------------|----------------------|--------------------|-----------------|---------------------------|
| P1321 | Programmable V/f volt. coord. 1 | | | | Min: 0.0 | Level: 3 |
| | CStat: CUT | Datatype: Float | Unit: V | Def: 0.0 | | |
| | P-Group: CONTROL | Active: Immediately | QuickComm. No | Max: 3000.0 | | |

See P1320 (programmable V/f freq. coord. 1).

| | | | | | | |
|--------------|--|----------------------------|----------------------|--------------------|------------------|---------------------------|
| P1322 | Programmable V/f freq. coord. 2 | | | | Min: 0.00 | Level: 3 |
| | CStat: CT | Datatype: Float | Unit: Hz | Def: 0.00 | | |
| | P-Group: CONTROL | Active: Immediately | QuickComm. No | Max: 650.00 | | |

See P1320 (programmable V/f freq. coord. 1).

| | | | | | | |
|--------------|--|----------------------------|----------------------|--------------------|-----------------|---------------------------|
| P1323 | Programmable V/f volt. coord. 2 | | | | Min: 0.0 | Level: 3 |
| | CStat: CUT | Datatype: Float | Unit: V | Def: 0.0 | | |
| | P-Group: CONTROL | Active: Immediately | QuickComm. No | Max: 3000.0 | | |

See P1320 (programmable V/f freq. coord. 1).

| | | | | | | |
|--------------|--|----------------------------|----------------------|--------------------|------------------|---------------------------|
| P1324 | Programmable V/f freq. coord. 3 | | | | Min: 0.00 | Level: 3 |
| | CStat: CT | Datatype: Float | Unit: Hz | Def: 0.00 | | |
| | P-Group: CONTROL | Active: Immediately | QuickComm. No | Max: 650.00 | | |

See P1320 (programmable V/f freq. coord. 1).

| | | | | | | |
|--------------|--|----------------------------|----------------------|--------------------|-----------------|---------------------------|
| P1325 | Programmable V/f volt. coord. 3 | | | | Min: 0.0 | Level: 3 |
| | CStat: CUT | Datatype: Float | Unit: V | Def: 0.0 | | |
| | P-Group: CONTROL | Active: Immediately | QuickComm. No | Max: 3000.0 | | |

See P1320 (programmable V/f freq. coord. 1).

| | | | | |
|--------------|--------------------------------|----------------------------|---------------------------|----------------------|
| P1333 | Start frequency for FCC | Min: 0.0 | Level: 3 | |
| | CStat: CUT | Datatype: Float | | Unit: % |
| | P-Group: CONTROL | Active: Immediately | | QuickComm. No |

Defines start frequency at which FCC (flux current control) is enabled as [%] of rated motor frequency (P0310).


Notice:

If this value is too low, the system may become unstable.

| | | | | |
|--------------|--------------------------|----------------------------|---------------------------|----------------------|
| P1335 | Slip compensation | Min: 0.0 | Level: 3 | |
| | CStat: CUT | Datatype: Float | | Unit: % |
| | P-Group: CONTROL | Active: Immediately | | QuickComm. No |

Dynamically adjusts output frequency of inverter so that motor speed is kept constant independent of motor load.

Increasing the load from M1 to M2 (see diagram) will decrease the motor speed from f1 to f2, due to the slip. The inverter can compensate for this by increasing the output frequency slightly as the load increases. The inverter measures the current and increases the output frequency to compensate for the expected slip.

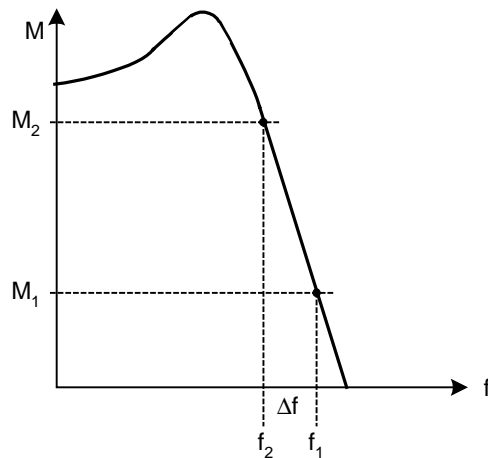

Value:

P1335 = 0 % : Slip compensation disabled.

P1335 = 100 % : This uses the motor data and motor model to add the rated slip frequency rated motor speed and rated motor current.

| | | | | |
|--------------|-----------------------------------|----------------------------|---------------------------|----------------------|
| P1340 | Imax controller prop. gain | Min: 0.000 | Level: 3 | |
| | CStat: CUT | Datatype: Float | | Unit: - |
| | P-Group: CONTROL | Active: Immediately | | QuickComm. No |

Proportional gain of the I_max controller.

Dynamically controls the inverter if the output current exceeds the maximum motor current (r0067). It does this by first limiting the inverter output frequency (to a possible minimum of the nominal slip frequency). If this action does not successfully remove the overcurrent condition, the inverter output voltage is reduced. When the overcurrent condition has been removed successfully, frequency limiting is removed using the ramp-up time set in P1120.

| | | | | |
|--------------|--------------------------|----------------------------|---------------------------|----------------------|
| P1800 | Pulse frequency | Min: 2 | Level: 3 | |
| | CStat: CUT | Datatype: U16 | | Unit: kHz |
| | P-Group: INVERTER | Active: Immediately | | QuickComm. No |

Sets pulse frequency of power switches in inverter. The frequency can be changed in steps of 2 kHz.

Pulse frequencies > 8 kHz reduce the maximum continuous motor current.

Dependency:

Minimum pulse frequency depends on P1082 (maximum frequency) and P0310 (rated motor frequency).

Note:

If silent operation is not absolutely necessary, lower pulse frequencies may be selected to reduce inverter losses and radio-frequency emissions.

Under certain circumstances, the inverter may reduce the switching frequency to provide protection against over-temperature (see P0290).

| | | | | | |
|--------------|-------------------------------------|----------------------|------------------|--------------------------------|---------------------------|
| r1801 | CO: Act. switching frequency | Datatype: U16 | Unit: kHz | Min: - | Level: 3 |
| | P-Group: INVERTER | | | Def: - Max: - | |

Actual pulse frequency of power switches in inverter.

Notice:

Under certain conditions (inverter overtemperature, see P0290), this can differ from the values selected in P1800 (pulse frequency).

| | | | | | |
|--------------|----------------------------|----------------------------|----------------------|---|--|
| P2000 | Reference frequency | Datatype: Float | Unit: Hz | Min: 1.00 | |
| | CStat: CT | Active: Immediately | QuickComm. No | Def: 50.00 Max: 650.00 | |

Full-scale frequency setting used by serial link (corresponds to 4000H) and analog I/O.

| | | | | | |
|-----------------|--------------------------|----------------------------|----------------------|--------------------------------|---------------------------|
| P2009[2] | USS normalization | Datatype: U16 | Unit: - | Min: 0 | Level: 3 |
| | CStat: CT | Active: Immediately | QuickComm. No | Def: 0 Max: 1 | |

Enables special normalization for USS.

Enum:

0 Disabled
1 Enabled

Index:

P2009[0] : Serial interface COM link
P2009[1] : Serial interface BOP link

Note:

If enabled, the main setpoint (word 2 in PZD) is not interpreted as 100 % = 4000H, but as "absolute" instead (e.g. 4000H = 16384 means 163.84 Hz).

| | | | | | |
|-----------------|---------------------|----------------------------|----------------------|--------------------------------|---------------------------|
| P2010[2] | USS baudrate | Datatype: U16 | Unit: - | Min: 3 | Level: 3 |
| | CStat: CUT | Active: Immediately | QuickComm. No | Def: 6 Max: 9 | |

Sets baud rate for USS communication.

Enum:

3 1200 baud
4 2400 baud
5 4800 baud
6 9600 baud
7 19200 baud
8 38400 baud
9 57600 baud

Index:

P2010[0] : Serial interface COM link
P2010[1] : Serial interface BOP link

| | | | | | |
|-----------------|--------------------|----------------------------|----------------------|---------------------------------|---------------------------|
| P2011[2] | USS address | Datatype: U16 | Unit: - | Min: 0 | Level: 3 |
| | CStat: CUT | Active: Immediately | QuickComm. No | Def: 0 Max: 31 | |

Sets unique address for inverter.

Index:

P2011[0] : Serial interface COM link
P2011[1] : Serial interface BOP link

Note:

You can connect up to a further 30 inverters via the serial link (i.e. 31 inverters in total) and control them with the USS serial bus protocol.

| | | | | | |
|-----------------|-----------------------|----------------------------|----------------------|--------------------------------|---------------------------|
| P2012[2] | USS PZD length | Datatype: U16 | Unit: - | Min: 0 | Level: 3 |
| | CStat: CUT | Active: Immediately | QuickComm. No | Def: 2 Max: 4 | |

Defines the number of 16-bit words in PZD part of USS telegram. The PZD part of the USS telegram is used for the main setpoint, and to control the inverter.

Index:

P2012[0] : Serial interface COM link
P2012[1] : Serial interface BOP link

| | | | | |
|-----------------|-----------------------|----------------------------|---------------------------|----------------------|
| P2013[2] | USS PKW length | Min: 0 | Level: 3 | |
| | CStat: CUT | Datatype: U16 | | Unit: - |
| | P-Group: COMM | Active: Immediately | | QuickComm. No |
| | | Def: 127 | | |
| | | Max: 127 | | |

Defines the number of 16-bit words in PKW part of USS telegram. The PKW part of the USS telegram is used to read and write individual parameter values

Enum:

0 No words
3 3 words
4 4 words
127 Variable

Index:

P2013[0] : Serial interface COM link
P2013[1] : Serial interface BOP link

Notice:

Setting P2013 has implications for the PKW word order.

| | | | | |
|-----------------|------------------------------|----------------------------|---------------------------|----------------------|
| P2014[2] | USS telegram off time | Min: 0 | Level: 3 | |
| | CStat: CT | Datatype: U16 | | Unit: ms |
| | P-Group: COMM | Active: Immediately | | QuickComm. No |
| | | Def: 0 | | |
| | | Max: 65535 | | |

Defines a time T_off after which a fault will be generated (F0070) if no telegram is received via the USS channels.

Index:

P2014[0] : Serial interface COM link
P2014[1] : Serial interface BOP link

Notice:

By default (time set to 0), no fault is generated (i.e. watchdog disabled).

| | | | | |
|-----------------|------------------------------------|----------------------|---------------------------|----------------------|
| r2015[4] | CO: PZD from BOP link (USS) | Min: - | Level: 3 | |
| | | Datatype: U16 | | Unit: - |
| | P-Group: COMM | | | QuickComm. No |
| | | Def: - | | |
| | | Max: - | | |

Displays process data received via USS on BOP link.

Index:

r2015[0] : Received word 0
r2015[1] : Received word 1
r2015[2] : Received word 2
r2015[3] : Received word 3

Note:

The control words can be viewed as bit parameters r2032 and r2033.

| | | | | |
|-----------------|----------------------------------|----------------------------|---------------------------|----------------------|
| P2016[4] | CI: PZD to BOP link (USS) | Min: 0:0 | Level: 3 | |
| | CStat: CT | Datatype: U32 | | Unit: - |
| | P-Group: COMM | Active: Immediately | | QuickComm. No |
| | | Def: 52:0 | | |
| | | Max: 4000:0 | | |

Selects signals to be transmitted to serial interface via BOP link

Example:

P2016[0] = 52.0 (default). In this case, the value of r0052 (CO/BO: Status word) is transmitted as 1st PZD to the BOP link.

Index:

P2016[0] : Transmitted word 0
P2016[1] : Transmitted word 1
P2016[2] : Transmitted word 2
P2016[3] : Transmitted word 3

| | | | | |
|-----------------|------------------------------------|----------------------|---------------------------|----------------------|
| r2018[4] | CO: PZD from COM link (USS) | Min: - | Level: 3 | |
| | | Datatype: U16 | | Unit: - |
| | P-Group: COMM | | | QuickComm. No |
| | | Def: - | | |
| | | Max: - | | |

Displays process data received via USS on COM link

Index:

r2018[0] : Received word 0
r2018[1] : Received word 1
r2018[2] : Received word 2
r2018[3] : Received word 3

Note:

The control words can be viewed as bit parameters r2036 and r2037.

| | | | | |
|-----------------|----------------------------------|----------------------------|---------------------------|---|
| P2019[4] | CI: PZD to COM link (USS) | Min: 0:0 | Level: 3 | |
| | CStat: CT | Datatype: U32 | | Def: 52:0 |
| | P-Group: COMM | Active: Immediately | | QuickComm. No Max: 4000:0 |

Index:

P2019[0] : Transmitted word 0
P2019[1] : Transmitted word 1
P2019[2] : Transmitted word 2
P2019[3] : Transmitted word 3

Details:

See r2016 (PZD to BOP link)

| | | | | |
|-----------------|---------------------------------|----------------|---------------------------|---------------|
| r2024[2] | USS error-free telegrams | Min: - | Level: 3 | |
| | Datatype: U16 | Unit: - | | Def: - |
| | P-Group: COMM | Max: - | | |

Displays number of error-free USS telegrams received.

Index:

r2024[0] : Serial interface COM link
r2024[1] : Serial interface BOP link

| | | | | |
|-----------------|-------------------------------|----------------|---------------------------|---------------|
| r2025[2] | USS rejected telegrams | Min: - | Level: 3 | |
| | Datatype: U16 | Unit: - | | Def: - |
| | P-Group: COMM | Max: - | | |

Displays number of USS telegrams rejected.

Index:

r2025[0] : Serial interface COM link
r2025[1] : Serial interface BOP link

| | | | | |
|-----------------|----------------------------------|----------------|---------------------------|---------------|
| r2026[2] | USS character frame error | Min: - | Level: 3 | |
| | Datatype: U16 | Unit: - | | Def: - |
| | P-Group: COMM | Max: - | | |

Displays number of USS character frame errors.

Index:

r2026[0] : Serial interface COM link
r2026[1] : Serial interface BOP link

| | | | | |
|-----------------|--------------------------|----------------|---------------------------|---------------|
| r2027[2] | USS overrun error | Min: - | Level: 3 | |
| | Datatype: U16 | Unit: - | | Def: - |
| | P-Group: COMM | Max: - | | |

Displays number of USS telegrams with overrun error.

Index:

r2027[0] : Serial interface COM link
r2027[1] : Serial interface BOP link

| | | | | |
|-----------------|-------------------------|----------------|---------------------------|---------------|
| r2028[2] | USS parity error | Min: - | Level: 3 | |
| | Datatype: U16 | Unit: - | | Def: - |
| | P-Group: COMM | Max: - | | |

Displays number of USS telegrams with parity error.

Index:

r2028[0] : Serial interface COM link
r2028[1] : Serial interface BOP link

| | | | | |
|-----------------|---------------------------------|----------------|---------------------------|---------------|
| r2029[2] | USS start not identified | Min: - | Level: 3 | |
| | Datatype: U16 | Unit: - | | Def: - |
| | P-Group: COMM | Max: - | | |

Displays number of USS telegrams with unidentified start.

Index:

r2029[0] : Serial interface COM link
r2029[1] : Serial interface BOP link

| | | | | |
|-----------------|----------------------|----------------|---------------------------|---------------|
| r2030[2] | USS BCC error | Min: - | Level: 3 | |
| | Datatype: U16 | Unit: - | | Def: - |
| | P-Group: COMM | Max: - | | |

Displays number of USS telegrams with BCC error.

Index:

r2030[0] : Serial interface COM link
r2030[1] : Serial interface BOP link

| | | | | | |
|-----------------|-------------------------|----------------------|----------------|--------------------------------|---------------------------|
| r2031[2] | USS length error | Datatype: U16 | Unit: - | Min: - | Level: 3 |
| | P-Group: COMM | | | Def: - Max: - | |

Displays number of USS telegrams with incorrect length.

Index:

r2031[0] : Serial interface COM link
r2031[1] : Serial interface BOP link

| | | | | | |
|--------------|---|----------------------|----------------|--------------------------------|---------------------------|
| r2032 | BO: CtrlWrd1 from BOP link (USS) | Datatype: U16 | Unit: - | Min: - | Level: 3 |
| | P-Group: COMM | | | Def: - Max: - | |

Displays control word 1 from BOP link (word 1 within USS).

Bitfields:

| | | | |
|-------|------------------------------|---|-----|
| Bit00 | ON/OFF1 | 0 | NO |
| | | 1 | YES |
| Bit01 | OFF2: Electrical stop | 0 | YES |
| | | 1 | NO |
| Bit02 | OFF3: Fast stop | 0 | YES |
| | | 1 | NO |
| Bit03 | Pulse enable | 0 | NO |
| | | 1 | YES |
| Bit04 | RFG enable | 0 | NO |
| | | 1 | YES |
| Bit05 | RFG start | 0 | NO |
| | | 1 | YES |
| Bit06 | Setpoint enable | 0 | NO |
| | | 1 | YES |
| Bit07 | Fault acknowledge | 0 | NO |
| | | 1 | YES |
| Bit08 | JOG right | 0 | NO |
| | | 1 | YES |
| Bit09 | JOG left | 0 | NO |
| | | 1 | YES |
| Bit10 | Control from PLC | 0 | NO |
| | | 1 | YES |
| Bit11 | Reverse (setpoint inversion) | 0 | NO |
| | | 1 | YES |
| Bit13 | Motor potentiometer MOP up | 0 | NO |
| | | 1 | YES |
| Bit14 | Motor potentiometer MOP down | 0 | NO |
| | | 1 | YES |
| Bit15 | Local / Remote | 0 | NO |
| | | 1 | YES |

| | | | | | |
|--------------|---|----------------------|----------------|--------------------------------|---------------------------|
| r2033 | BO: CtrlWrd2 from BOP link (USS) | Datatype: U16 | Unit: - | Min: - | Level: 3 |
| | P-Group: COMM | | | Def: - Max: - | |

Displays control word 2 from BOP link (i.e. word 4 within USS)

Bitfields:

| | | | |
|-------|-----------------------|---|-----|
| Bit00 | Fixed frequency Bit 0 | 0 | NO |
| | | 1 | YES |
| Bit01 | Fixed frequency Bit 1 | 0 | NO |
| | | 1 | YES |
| Bit02 | Fixed frequency Bit 2 | 0 | NO |
| | | 1 | YES |
| Bit09 | DC brake enabled | 0 | NO |
| | | 1 | YES |
| Bit13 | External fault 1 | 0 | YES |
| | | 1 | NO |

Dependency:

P0700 = 4 (USS on BOP link) and P0719 = 0 (Cmd / Setpoint = BICO parameter).

| | | | |
|--------------|---|---------------|---------------------------|
| r2036 | BO: CtrlWrd1 from COM link (USS) | Min: - | Level: 3 |
| | Datatype: U16 Unit: - | Def: - | |
| | P-Group: COMM | Max: - | |

Displays control word 1 from COM link (i.e. word 1 within USS)

Bitfields:

| | | | |
|-------|------------------------------|---|-----|
| Bit00 | ON/OFF1 | 0 | NO |
| | | 1 | YES |
| Bit01 | OFF2: Electrical stop | 0 | YES |
| | | 1 | NO |
| Bit02 | OFF3: Fast stop | 0 | YES |
| | | 1 | NO |
| Bit03 | Pulse enable | 0 | NO |
| | | 1 | YES |
| Bit04 | RFG enable | 0 | NO |
| | | 1 | YES |
| Bit05 | RFG start | 0 | NO |
| | | 1 | YES |
| Bit06 | Setpoint enable | 0 | NO |
| | | 1 | YES |
| Bit07 | Fault acknowledge | 0 | NO |
| | | 1 | YES |
| Bit08 | JOG right | 0 | NO |
| | | 1 | YES |
| Bit09 | JOG left | 0 | NO |
| | | 1 | YES |
| Bit10 | Control from PLC | 0 | NO |
| | | 1 | YES |
| Bit11 | Reverse (setpoint inversion) | 0 | NO |
| | | 1 | YES |
| Bit13 | Motor potentiometer MOP up | 0 | NO |
| | | 1 | YES |
| Bit14 | Motor potentiometer MOP down | 0 | NO |
| | | 1 | YES |
| Bit15 | Local / Remote | 0 | NO |
| | | 1 | YES |

Details:

See r2033 (control word 2 from BOP link)

| | | | |
|--------------|---|---------------|---------------------------|
| r2037 | BO: CtrlWrd2 from COM link (USS) | Min: - | Level: 3 |
| | Datatype: U16 Unit: - | Def: - | |
| | P-Group: COMM | Max: - | |

Displays control word 2 from COM link (i.e. word 4 within USS)

Bitfields:

| | | | |
|-------|-----------------------|---|-----|
| Bit00 | Fixed frequency Bit 0 | 0 | NO |
| | | 1 | YES |
| Bit01 | Fixed frequency Bit 1 | 0 | NO |
| | | 1 | YES |
| Bit02 | Fixed frequency Bit 2 | 0 | NO |
| | | 1 | YES |
| Bit09 | DC brake enabled | 0 | NO |
| | | 1 | YES |
| Bit13 | External fault 1 | 0 | YES |
| | | 1 | NO |

Details:

See r2033 (control word 2 from BOP link)

| | | | |
|-----------------|-------------------------------------|---------------|---------------------------|
| r2110[4] | Warning number | Min: - | Level: 3 |
| | Datatype: U16 Unit: - | Def: - | |
| | P-Group: ALARMS | Max: - | |

Displays warning information.

A maximum of 2 active warnings (indices 0 and 1) and 2 historical warnings (indices 2 and 3) may be viewed.

Index:

| | |
|----------|---------------------------------|
| r2110[0] | : Recent Warnings --, warning 1 |
| r2110[1] | : Recent Warnings --, warning 2 |
| r2110[2] | : Recent Warnings -1, warning 3 |
| r2110[3] | : Recent Warnings -1, warning 4 |

Note:

The operator panel display will flash while a warning is active. The LED indicates the warning status in this case.

Notice:

Indices 0 and 1 are not stored.

| | | | | | | |
|-----------------|-------------------------|----------------------|----------------|---------------|---------------|---------------|
| r2114[2] | Run time counter | Datatype: U16 | Unit: - | Min: - | Def: - | Level: |
| | P-Group: ALARMS | | | Max: - | | 3 |

Displays run time counter. It is the total time the drive has been powered up. Every time you do power cycle, it will save the value then restore it and the counter carries on ticking.

Index:


- r2114[0] : System Time, Seconds, Upper Word
- r2114[1] : System Time, Seconds, Lower Word

| | | | | | | |
|--------------|-----------------------------------|----------------------------|----------------------|-------------------|------------------|---------------|
| P2167 | Switch-off frequency f_off | Datatype: Float | Unit: Hz | Min: 0.00 | Def: 1.00 | Level: |
| | CStat: CUT | Active: Immediately | QuickComm. No | Max: 10.00 | | 3 |
| | P-Group: ALARMS | | | | | |

Sets frequency threshold below which inverter switches off.

If the frequency falls below this threshold, bit 1 in status word 2 (r0053) is set.

$$|n_{act}| < n_{off}$$

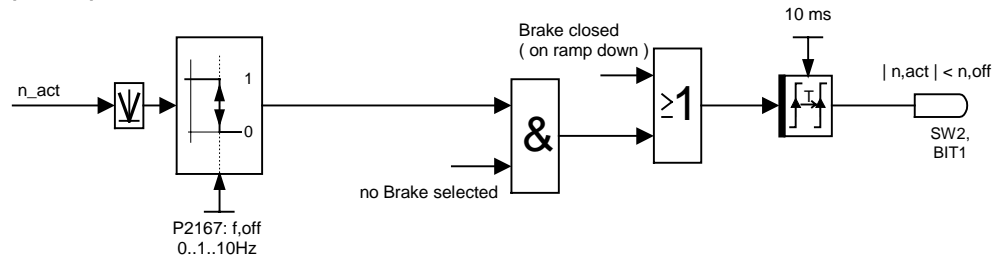

Dependency:

Switched off only if OFF1 or OFF3 active.

| | | | | | | |
|--------------|-----------------------------------|----------------------------|-----------------------|---------------|---------------|---------------|
| P3900 | End of quick commissioning | Datatype: U16 | Unit: - | Min: 0 | Def: 0 | Level: |
| | CStat: C | Active: Immediately | QuickComm. Yes | Max: 3 | | 1 |
| | P-Group: QUICK | | | | | |

Performs calculations necessary for optimized motor operation.

After completion of calculation, P3900 and P0010 (parameter groups for commissioning) are automatically reset to their original value 0.

Enum:

- 0 No quick commissioning
- 1 Start quick commissioning with factory reset
- 2 Start quick commissioning
- 3 Start quick commissioning only for motor data

Dependency:

Changeable only when P0010 = 1 (quick commissioning)

Note:

When setting 1 is selected, only the parameter settings carried out via the commissioning menu "Quick commissioning", are retained; all other parameter changes, including the I/O settings, are lost. Motor calculations are also performed.

When setting 2 is selected, only those parameters, which depend on the parameters in the commissioning menu "Quick commissioning" (P0010 = 1) are calculated. The I/O settings are also reset to default and the motor calculations performed.

When setting 3 is selected, only the motor and controller calculations are performed. Exiting quick commissioning with this setting saves time (for example, if only motor rating plate data have been changed).

End of quick commissioning calculates a variety of motor parameters, overwriting previous values including P2000 (reference frequency).

2 Faults and Alarms

2.1 Fault Messages

| Fault | Possible Causes | Diagnose & Remedy | Reaction |
|--|--|--|----------|
| F0001 OverCurrent | <ul style="list-style-type: none"> ➤ Motor power (P0307) does not correspond to the inverter power (r0206) ➤ Motor lead short circuit ➤ Earth faults | Check the following: <ol style="list-style-type: none"> 1. Motor power (P0307) must correspond to inverter power (r0206). 2. Cable length limits must not be exceeded. 3. Motor cable and motor must have no short-circuits or earth faults 4. Motor parameters must match the motor in use 5. Motor must not be obstructed or overloaded. <ul style="list-style-type: none"> ➤ Increase the ramp time ➤ Reduce the boost level | Off2 |
| F0002 OverVoltage | <ul style="list-style-type: none"> ➤ Overvoltage can be caused either by too high main supply voltage or if motor is in regenerative mode. ➤ Regenerative mode can be caused by fast ramp downs or if the motor is driven from an active load. | Check the following: <ol style="list-style-type: none"> 1. Supply voltage (P0210) must lie within limits indicated on inverter rating plate . 2. DC-link voltage controller must be enabled (P1240) and parameterized properly. 3. Ramp-down time (P1121) must match inertia of load. <p>NOTE Higher inertia requires longer ramp times</p> | Off2 |
| F0003 UnderVoltage | <ul style="list-style-type: none"> ➤ Main supply failed. ➤ Shock load outside specified limits. | Check the following: <ol style="list-style-type: none"> 1. Supply voltage (P0210) must lie within limits indicated on inverter rating plate. 2. Supply must not be susceptible to temporary failures or voltage reductions. | Off2 |
| F0004 Inverter Over Temperature | <ul style="list-style-type: none"> ➤ Ventilation inadequate ➤ Ambient temperature is too high. | Check the following: <ol style="list-style-type: none"> 1. Pulse frequency must be set to default value 2. Ambient temperature could be higher than specified for the inverter | Off2 |
| F0005 Inverter I²t | <ul style="list-style-type: none"> ➤ Inverter overloaded. ➤ Duty cycle too demanding. ➤ Motor power (P0307) exceeds inverter power capability (r0206). | Check the following: <ol style="list-style-type: none"> 1. Load duty cycle must lie within specified limits. 2. Motor power (P0307) must match inverter power (r0206) | Off2 |
| F0011 Motor Over Temperature I²t | Motor overloaded | Check the following: <ol style="list-style-type: none"> 1. Load duty cycle must be correct 2. Motor temperatur warning level (P0604) must match. | Off1 |
| F0041 | Stator resistance measurement failure | <ul style="list-style-type: none"> ➤ Check if the motor is connected to the inverter. ➤ Check that the motor data have been entered correctly. | Off2 |
| F0051 Parameter EEPROM Fault | Read or write failure while saving non-volatile parameter. | Factory Reset and new parameterization Change drive | Off2 |
| F0052 power stack Fault | Read failure for power stack information or invalid data. | Change drive | Off2 |
| F0060 Asic Timeout | Internal communications failure | If fault persists, change inverter Contact Service Department | Off2 |

| Fault | Possible Causes | Diagnose & Remedy | Reaction |
|---|--|---|----------|
| F0071 USS (BOP-link) setpoint fault | No setpoint values from USS during telegram off time | Check USS master | Off2 |
| F0072 USS (COMM link) setpoint fault | No setpoint values from USS during telegram off time | Check USS master | Off2 |
| F0085 External Fault | External fault triggered via terminal inputs | Disable terminal input for fault trigger. | Off2 |
| F0101 Stack Overflow | Software error or processor failure | <ul style="list-style-type: none"> ➤ Cycle through power (on/off). ➤ Replace drive if fault is not corrected. | Off2 |
| F0450 BIST Tests Failure (Service Mode Only) | Selftest failed | <ul style="list-style-type: none"> ➤ Drive may run but some features will not work properly. ➤ Replace drive. | Off2 |

2.2 Alarms

| Alarm | Possible Causes | Diagnose & Remedy | Reaction |
|--|--|--|----------|
| A0501 Current Limit | <ul style="list-style-type: none"> ➤ Motor power does not correspond to the inverter power ➤ Motor leads are too long ➤ Earth faults | Check the following: <ol style="list-style-type: none"> 1. Motor power (P0307) must correspond to inverter power (r0206). 2. Cable length limits must not be exceeded. 3. Motor cable and motor must have no short-circuits or earth faults 4. Motor parameters must match the motor in use 5. Motor must not be obstructed or overloaded <ul style="list-style-type: none"> ➤ Increase the ramp-up-time. ➤ Reduce the boost. | -- |
| A0502 Overvoltage limit | <ul style="list-style-type: none"> ➤ Overvoltage limit is reached. ➤ This warning can occur during ramp down, if the dc-link controller is disabled (P1240 = 0). | If this warning is displayed permanently, check drive input voltage . | -- |
| A0503 UnderVoltage Limit | Main supply failed | Check main supply voltage (P0210). | -- |
| A0504 Inverter Over Temperature | Warning level of inverter heat-sink temperature (P0614) is exceeded, resulting in pulse frequency reduction and/or output frequency reduction (depending on parametrization in (P0610)) | Check the following: <ol style="list-style-type: none"> 1. Ambient temperature must lie within specified limits 2. Load conditions and duty cycle must be appropriate | -- |
| A0505 Inverter I²t | Warning level exceeded, current will be reduced if parameterized (P0610 = 1) | Check that duty cycle lies within specified limits | -- |
| A0506 Inverter duty cycle | Difference between heatsink and IGBT junction temperature exceeds warning limits | Check that duty cycle and shock loads lie within specified limits | -- |
| A0511 Motor Over Temperature I²t | <ul style="list-style-type: none"> ➤ Motor overloaded. ➤ Load duty cycle too high. | Check the following: <ol style="list-style-type: none"> 1. P0611 (motor I²t time constant) should be set to appropriate value 2. P0614 (Motor I²t overload warning level) should be set to suitable level | -- |
| A0600 RTOS Overrun Warning | Software problem | Contact Service Department | -- |

| Alarm | Possible Causes | Diagnose & Remedy | Reaction |
|---|---|---|----------|
| A0910 Vdc-max controller de-activated | <ul style="list-style-type: none"> ➤ Vdc max controller has been de-activated ➤ Occurs if main supply voltage is permanently too high. ➤ Occurs if motor is driven by an active load, causing motor to go into regenerative mode. ➤ Occurs at very high load inertias, when ramping down. | Check the following: <ol style="list-style-type: none"> 1. Input voltage must lie within range. 2. Load must be matched. 3. In certain cases apply braking resistor. | -- |
| A0911 Vdc-max controller active | Vdc max controller is active; so ramp-down times will be increased automatically to keep DC-link voltage (r0026) within limits | Check the inverter input voltage (P0210) | -- |
| A0920 ADC parameters not set properly. | ADC parameters should not be set to identical values, since this would produce illogical results. | Check P0757, P0758, P0759 and P0760 | -- |
| A0922 No load applied to inverter | No Load is applied to the inverter. As a result, some functions may not work as under normal load conditions. | Check that a load has been applied to the inverter. | -- |

Suggestions and/or Corrections

To
Siemens AG
Automation & Drives
Group
SD VM 4
P.O. Box 3269

D-91050 Erlangen
Federal Republic of Germany

[Suggestions for technical documentation](#)

| |
|--|
| Suggestions Corrections |
| For Publication/Manual: MICROMASTER 410 Parameter List |
| User Documentation |
| Order number: 6SE6400-5EB00-0BP0 Date of Issue: 10/01 |
| Should you come across any printing errors when reading this publication, please notify us on this sheet. Suggestions for improvement are also welcome. |

| |
|--|
| From Name: _____ Company/Service Department Address: _____ Phone: _____ / _____ Fax: _____ / _____ |
|--|

Siemens AG
Automation and Drives Group (A&D)
Standard Drives (SD) Division
Postfach 3269, D-91050 Erlangen
Federal Republic of Germany

© Siemens AG, 2001
Subject to change without prior notice

Siemens Aktiengesellschaft

Order No.: 6SE6400-5EB00-0BP0

